

# **Pro Tools**

## **MIDI Control Surfaces Guide**

**Version 5.1 for Macintosh and Windows**

### **Digidesign Inc.**

3401-A Hillview Avenue  
Palo Alto, CA 94304 USA  
tel: 650-842-7900  
fax: 650-842-7999

### **Technical Support (USA)**

650-842-6699  
650-856-4275

### **Product Information (USA)**

650-842-6602  
800-333-2137

### **Fax on Demand (USA)**

1-888-USE-DIGI (873-3444)

### **International Offices**

Visit the Digidesign Web site  
for contact information.

### **World Wide Web**

[www.digidesign.com](http://www.digidesign.com)

### **Digidesign FTP Site**

[ftp.digidesign.com](ftp://ftp.digidesign.com)

**digidesign®**

A division of **Avid**

## **Copyright**

This User's Guide is copyrighted ©2001 by Digidesign, a division of Avid Technology, Inc. (hereafter "Digidesign"), with all rights reserved. Under copyright laws, this manual may not be duplicated in whole or in part without the written consent of Digidesign.

DIGIDESIGN, AVID and PRO TOOLS are trademarks or registered trademarks of Digidesign and/or Avid Technology, Inc. All other trademarks are the property of their respective owners.

All features and specifications subject to change without notice.

PN 932708438-00 REV A 01/01

# contents

<b>Chapter 1. Working With MIDI Control Surfaces</b> . . . . .	1
MIDI Control Surface Terms . . . . .	2
Configuring Your System for a MIDI Control Surface . . . . .	2
General Information for All MIDI Control Surfaces. . . . .	6
 <b>Chapter 2. Mackie HUI Control Surface</b> . . . . .	11
WINDOW Switches . . . . .	13
Analog Monitoring Section . . . . .	14
Level Meters . . . . .	15
Transport Controls . . . . .	15
AUDITION, PRE/POST, and IN/OUT Switches . . . . .	17
Time Counter Display and Rude Solo Light . . . . .	18
Numeric Keypad . . . . .	19
Scrub/Shuttle Wheel . . . . .	19
Keyboard Shortcuts Section . . . . .	22
Zoom Switch Quadrant . . . . .	24
Bank Swapping and Channel Scrolling. . . . .	27
Channel Fader Strip and Select/Assign sections. . . . .	27
Master BYPASS Switch . . . . .	34
V-SEL Switch. . . . .	35
Adjusting Channel Pan. . . . .	36
STATUS/GROUP Switches . . . . .	36
Working with Groups . . . . .	37
Select/Assign section . . . . .	37
Working with Sends and Plug-Ins . . . . .	38
Selecting and Editing Inserts and Plug-Ins . . . . .	39
Send Level Editing. . . . .	41
Fader Flip mode . . . . .	41
DEFAULT Switch . . . . .	41

Working with Plug-Ins: Using the DSP Edit/Assign section . . . . .	42
Assigning Plug-Ins and Hardware I/O Inserts . . . . .	44
Editing Plug-In Parameters . . . . .	45
Automation . . . . .	47
Automating Plug-Ins . . . . .	49
Function Keys . . . . .	50
Known Issues with HUI and Pro Tools . . . . .	50
Troubleshooting and Diagnostics . . . . .	51
 <b>Chapter 3. JL Cooper CS-10 MIDI Control Surface . . . . .</b>	 53
Fader Switch Functions . . . . .	53
Additional Switch Functions . . . . .	54
Rotary Knob Functions . . . . .	55
Transport Switches . . . . .	56
Scrolling the Edit and Mix windows . . . . .	56
Scrub and Shuttle Wheel . . . . .	57
Creating Selections Using the Scrub/Shuttle Wheel . . . . .	57
 <b>Chapter 4. JL Cooper MCS-Panner . . . . .</b>	 59
Installation and Configuration . . . . .	59
MCS-Panner . . . . .	60
Using the MCS-Panner . . . . .	61
Adjusting Other Parameters . . . . .	63
MCS-Panner with a Digidesign EditPack . . . . .	64
 <b>Chapter 5. Penny &amp; Giles MM-16 and DC-16 MIDI Control Surfaces . . . . .</b>	 65
Fader Belt Switch Functions . . . . .	67
Additional Switch Functions . . . . .	67
Transport Switches . . . . .	68
Scrub and Shuttle Functions . . . . .	69
Creating Selections Using the Scrub/Shuttle Wheel . . . . .	69
Resetting the Penny & Giles MM-16 or DC-16 . . . . .	71

**Chapter 6. Peavey PC–1600 MIDI Control Surface** ..... 73

    Preset Modes ..... 73

    Function Switches ..... 74

    Transport Control of External Devices ..... 75

**Appendix A. Using Other MIDI Control Surfaces** ..... 77

**Index** ..... 81



## chapter 1

# Working With MIDI Control Surfaces

MIDI control surfaces add hands-on control to Pro Tools functions. You can use a MIDI control surface to adjust on-screen faders and knobs, activate transport controls, or scrub and shuttle in Pro Tools.

## Supported Control Surfaces

Pro Tools 5.1 supports the following MIDI control surfaces:

- JL Cooper MCS-Panner™
- Mackie Design's HUI™ Control Surface
- CM Automation's MotorMix™
- JL Cooper CS-10™ series
- Peavey PC-1600™
- Penny & Giles MM-16™ and DC-16™


New MIDI control surface features are provided through the latest Control Surface Personality files installed with Pro Tools.

*NOTE: MotorMix uses the HUI Control Surface Personality.*

## MIDI Control Surface Personalities

*MIDI Control Surface Personalities* are files that allow Pro Tools to communicate with the MIDI control surface.

These files are installed in the Controllers folder within the DAE Folder. Pro Tools scans the Controllers folder whenever you open the Peripherals dialog and assign a MIDI control surface.

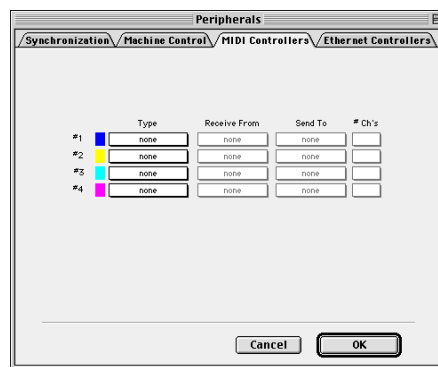

*MIDI Controllers page of the Peripherals dialog*

---

## MIDI Control Surface Terms

Here are a few terms that apply to the use of a MIDI control surface with Pro Tools:

**Bank** A group of similar controls (such as faders, rotary controls, or switches) that are arranged in discrete channel strips. With a control surface, you can operate one bank of controls at a time.

**Bank Size or Bank Width** Corresponds to the number of controls on your MIDI control surface. For example, the MM-16 and DC-16 each have 16 continuous-belt faders, while the MotorMix, HUI and the CS-10 each have eight faders. You can use more than one control surface to create a wider bank (for example, you can control up to 64 channels using four Penny & Giles control surfaces).

**Bank Swap** The process by which Pro Tools lets you switch control from one on-screen bank of channel strip faders to another.

**Global Controls** Controls that perform single functions that never change. For example, the transport switches or the jog/Shuttle wheel affect all tracks, and do not change when you switch banks.

In Pro Tools, you can mix MIDI control surface types, and have them act as a single bank. For example, you could use a HUI, MM-16 or DC-16, CS-10 and PC-1600 together at the same time, which would create a MIDI control surface console that is 48 channels wide. If you swap banks with this extended console, you will be switching 48 faders at a time.

Pro Tools supports use of multiple control surfaces of the same type, and can duplicate controls from either control surface. However, only the control surface assigned to the first MIDI Control Surface position (in the Peripherals dialog) can have access to plug-in editing.

---

## Configuring Your System for a MIDI Control Surface

### Windows

Connect and configure your MIDI interface according to the manufacturer's instructions. Your MIDI ports will appear in the Pro Tools pop-up menus for MIDI port source and destination.

### Macintosh

Connect and configure your MIDI interface according to the manufacturer's instructions.

Before using a MIDI control surface with Pro Tools, you must first configure it as an OMS device and then enable it in the Pro Tools Peripherals dialog. The Apple Serial DMA driver option must also be deselected in the OMS preferences for Pro Tools to properly communicate with MIDI devices.



*To install OMS on your system and disable the Apple Serial DMA driver option, refer to the OMS documentation included on the Pro Tools CD-ROM.*

### Connect Your MIDI Control Surface to the MIDI Interface

Connect a MIDI cable between the MIDI OUT port on your MIDI control surface and the MIDI IN port on your MIDI interface.

Connect a MIDI cable between the MIDI IN port on your MIDI control surface and the MIDI OUT port on your MIDI interface. If you have a multi-port MIDI interface, take note of which MIDI port the control surface is connected to.



Refer to the manufacturer's documentation for more details regarding the specifics of connecting the MIDI cables to and from your MIDI control surface.

## Configuring OMS for Your MIDI Control Surface

The following are basic instructions for configuring your MIDI control surface in OMS. If you are not familiar with OMS, OMS devices, or how to configure OMS Setup, refer to the OMS documentation included on the Pro Tools CD-ROM.

### To configure your MIDI control surface in OMS:


- 1 In your OMS Studio Setup, click on your MIDI control surface's icon and choose Studio > MIDI Device Info.
- 2 Make sure Is Control Surface and Is Multitimbral are selected.
- 3 Make sure the Receives and Sends boxes for MIDI Time Code, MIDI Beat Clock, and MIDI Machine Control are deselected.
- 4 Under Receive Channels, select the channel for sending and receiving data from the MIDI control surface. Refer to the table below for control surface channel requirements. If your MIDI control surface is the only device connected to a port on a multi-port MIDI interface, you can leave all receive channels selected, since there will be no potential channel conflicts.

#### Channel Requirements for Control Surfaces

Control Surface	Channel
Mackie HUI	1
Penny & Giles (all)	16
JL Cooper CS-10	16
Peavey PC-1600	any

5 Click OK.

6 In the OMS Setup window, connect the MIDI control surface to the correct OMS port location or MIDI interface. Drag the MIDI control surface icon onto the icon for the port or MIDI interface to which you are connecting. Arrows between the MIDI control surface and the MIDI interface signify a connection has been made.

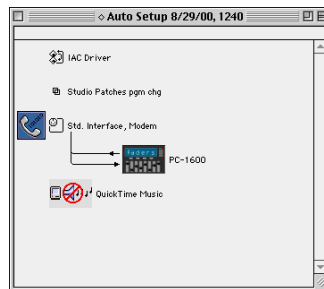

#### Connecting the MIDI Control Surface to the correct port or MIDI interface in the OMS Setup window

You can change the MIDI control surface icon to match the visual look of your control surface by clicking the icon and choosing the Device Icon command in the Studio menu.

- 7 Save the changes to your current Studio Setup document.
- 8 Pro Tools supports use of up to four MIDI control surfaces at the same time. If you use multiple control surfaces, make sure that none of the control surfaces are assigned to the same MIDI port and channel.


## Configuring Pro Tools

(Windows and Macintosh)

*NOTE: If you are using the Mackie HUI, make sure Active in Background is selected in the Pro Tools Operations menu.*

**To configure Pro Tools for your MIDI control surface:**


- 1 Choose Setups > Peripherals and click on MIDI Controllers.
- 2 In the MIDI Controllers field, choose your MIDI control surface device name from the Type pop-up menu.

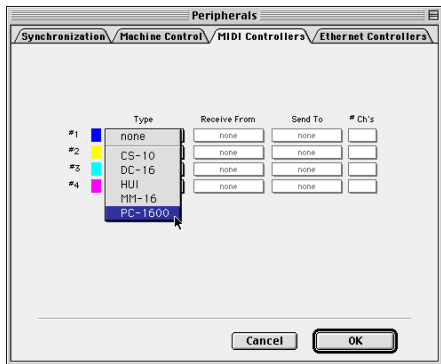

*Choosing the type of MIDI control surface*

- 3 Choose the source and destination ports for your MIDI control surface. These should correspond to the input and output ports to which your MIDI control surface is connected.


- 4 Choose the MIDI control surface's source port from the Receive From pop-up menu.

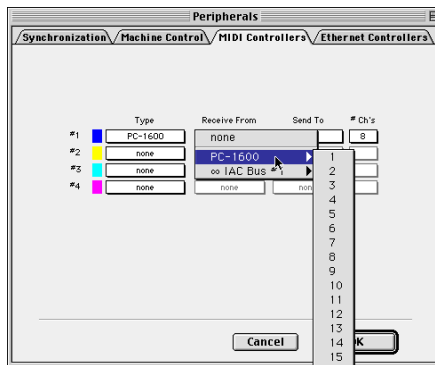

*Choosing the source port for a MIDI control surface*

- 5 Additionally, if you are using the PC-1600, choose a MIDI channel in the source port sub-menu to receive data. The MM-16, DC-16 and the CS-10 main unit always transmit on MIDI channel 16, and the optional eight fader CS-10<sup>x</sup> expander units always transmit on MIDI channel 15.

- 6 Choose a destination port from the Send To pop-up menu.

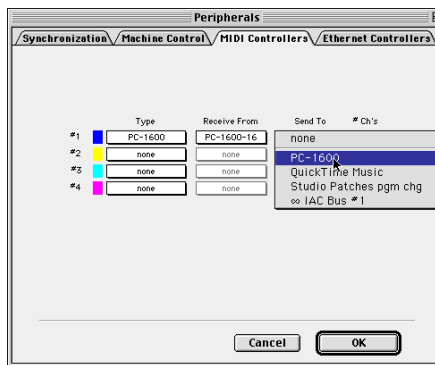

*Choosing the destination port for a MIDI control surface*

**7** If you are using the PC-1600, choose a MIDI channel in the destination port submenu to transmit data. The MM-16, DC-16 and the CS-10 main unit always receive on MIDI channel 16, and the optional eight fader CS-10<sup>x</sup> expander units always receive on MIDI channel 15.

**8** If your MIDI control surface has more than eight channel strips (such as JL Cooper's CS-10<sup>2</sup> with additional CS-10<sup>x</sup> expansion modules), or if you are using multiple devices of the same type in series, choose the appropriate number of channel strips from the pop menu under #Ch's.

**9** Click OK.

You can configure additional MIDI control surfaces (for a total of four) by repeating the above steps. Make sure that none of the control surfaces are assigned to the same MIDI source and destination ports or channels in the Pro Tools Peripherals dialog or in OMS.

## Enabling Input Devices


### (Macintosh Only)

On the Macintosh, you must enable the MIDI control surface as an input device in Pro Tools.

#### To enable an input device:

- 1** Choose MIDI > Input Devices
- 2** Select the MIDI control surface and click OK.

When you add a device in OMS Setup while Pro Tools is running, it will be automatically enabled as an input device. If you want to prevent MIDI data from a control surface reaching Pro Tools, you can disable a control surface as an input device.

 *For more information on recording MIDI and enabling input devices, refer to the Pro Tools Reference Guide.*

## Testing Connections

Move a fader or knob on your MIDI control surface, and the corresponding on-screen control should move. If your system does not seem to be responding correctly, first check all MIDI connections and settings. If there is still a problem, repeat the installation and configuration steps.

## Pro Tools Display of Banks

In the Pro Tools Mix window, the channel strips corresponding to a "bank width" of faders are highlighted in color. The number of faders in a bank will correspond to your control surface type, and to the number of channels specified in the #Ch's pop-up menu.

Each control surface choice in the Peripherals dialog has an identifying color associated with it. Pro Tools places a colored outline around the channel strips in any bank governed by your control surface. If you enable additional control surfaces, Pro Tools will outline code the channel strips with the color that corresponds to the numbered control surface (1-4) in the Peripherals dialog.

## Overview of Control Surface Parameters

In addition to on-screen fader and knob control, your MIDI control surface can access basic Pro Tools commands for creating selections and regions, setting zoom views and Memory Locations, and enabling online or offline status, along with some modifier key controls whose functions correspond to their computer keyboard equivalents. The switch functions for supported MIDI control surfaces are listed in the chapters for the respective control surfaces.

## Removing a MIDI Control Surface

As long as your MIDI control surface is enabled in the Peripherals dialog, Pro Tools will automatically scan the ports for your MIDI control surface each time the program launches.

With the exception of the Mackie HUI, if enabled control surfaces are not found, Pro Tools will nevertheless continue to behave as if they are connected. For example, bank outlines will still appear for your control surface on the appropriate fader channel strips.

If you disconnect your MIDI control surface, and continue to use Pro Tools, it is therefore recommended that you reconfigure the Pro Tools settings to reflect this change.

### To remove an enabled MIDI control surface:

- 1 Choose Setups > Peripherals and click MIDI Control Surfaces.
- 2 Under MIDI Control Surfaces, choose None from the Type pop-up menu for the control surface you wish to remove.
- 3 Repeat as needed to remove additional control surfaces.
- 4 Click OK when you have finished.

---

## General Information for All MIDI Control Surfaces

### Using Multiple Control Surfaces

You can use any combination of up to three different types of MIDI control surfaces simultaneously. Each control surface will be indicated in Pro Tools using color outlines of the track or controls associated with each device.

Each control surface's color will also designate relevant stateplates for closed inserts, sends or track names. When more than one control surface is active on a given track, the stateplate will be highlighted in white.

## Assigning Multiple Outputs

### To make multiple output assignments:

- 1 Enter Assign Mode by pressing the Assign switch, then Output.
- 2 While pressing SHIFT+CONTROL, scroll the list of available outputs.
- 3 Press the flashing Assign switch to commit to each selected output.

### To remove a member of a multiple output assignment group:

- 1 Enter Assign Mode by pressing the Assign switch, then Output.
- 2 While pressing SHIFT+CONTROL, scroll the list of outputs.
- 3 Deselect the output assignment you wish to remove.

## MIDI Control Surface Width and Bank Swapping

In the Peripherals dialog, the #Ch's pop-up menu indicates the number of fader channels for your MIDI control surface. Once this is set, bank swapping is optimized for the current control surface configuration.

In Pro Tools you can swap banks of 8 to 64 channel strips at a time (depending on the type of MIDI control surface and total number of faders available), or shift the bank over one channel strip at a time.

Pro Tools shows which tracks are currently under remote control by outlining the channel strip's stateplate in a particular color.

Each MIDI control surface type has its own key commands for bank swapping. These commands are covered in the chapters for the respective control surfaces.

## Toggling Input Status

You can toggle at any time between Auto Input Monitor and Input Only modes by pressing OPTION+K.

## AUTO Switch

**To change the automation state of a group of selected tracks:**

- 1 Select the tracks you want to change.
- 2 Press one of the MODE buttons in the AUTO-MATION section to change all selected tracks to that mode.

– or –


Select the tracks for which you want to change Automation mode.

- 3 While pressing SHIFT/OPTION, press the AUTO button on any of the selected tracks to step through automation modes. The selected tracks will all change with each step through the automation modes.

## “Pass Through Null” Fader Automation

In order to activate automation recording in the Touch or Latch automation modes, the fader or other control must first match or “pass through” the current automation playlist value.

In the Touch and Latch automation modes, the auto-matching LEDs on individual channels in the Mix window indicate which direction a fader needs to be moved to match the current automation data.



*Triangular AutoMatch LEDs on a channel strip*

When fader position and data match, the track will begin writing automation and will stop writing automation when you stop moving the fader and the Touch Timeout has expired (Touch mode), or when playback stops (Latch mode). You do not have to manually “null” the fader to match the preexisting automation level at the punch-in point before playback begins.

This pass-through-null feature does not apply to the Mackie HUI or the Penny & Giles MM-16 and DC-16. The HUI has touch-sensitive faders that will overwrite automation data as soon as they are moved, and the MM-16 and DC-16 use continuous belt controls, where the relative position of the faders always matches the automation playback level.

**A** *The Peavey PC-1600 can cause automation recording and playback to become inaccurate during rapid fader moves. This is a limitation of the PC-1600. The Peavey controller samples its fader movement at a fairly low rate that can sometimes cause it to miss fader positions used for nulling.*

## Automating Switched Controls

When automating switched controls (such as mutes or plug-in bypasses), automation data is written for as long as the switch or button for that control is pressed or touched.

For example, if you have just written a series of mute on and off states in quick succession on a channel, the manual method for clearing this automation data would require you to move to the Edit window, choose automation playlist for Mute, select the mute automation data, and delete it.

In Pro Tools, you don't have to perform all of these steps. Instead, you can perform another automation pass on the track and press the Mute switch when it reaches the state you want to keep. As long as you keep the Mute switch depressed, Pro Tools erases the underlying changes in mute state that occur until you press Stop.

## Global Modifier Keys

All modifier keys act in a reciprocal fashion, meaning the modifier can be held down on either the control surface or the computer keyboard. Similarly, you can use the keyboard's modifier keys in conjunction with control surface switches (such as Mute, Solo, or Record Ready) for all keyboard modifier operations.

## Disengaging Faders from Mix Groups

The Control keys on both the computer keyboard and the MIDI control surface serve as a clutch for disengaging a fader from a Mix group. However, the Control key on the computer keyboard and the CONTROL switch on the MIDI control surface are not reciprocal. You must press the CONTROL switch on the control surface to move a control surface fader independently of its Mix group.

## Transport Fast Forward/Rewind Settings

When the Audio During Fast Forward/Rewind option is selected in the Operation Preferences, you will hear scanned audio during rewind and fast forward.

If the Audio During Fast Forward/Rewind option is not selected, you can continuously rewind or fast forward by holding down the corresponding switch. You can also rewind or fast forward incrementally by repeatedly clicking the corresponding switch. The size of these increments depends on which Display mode is currently selected:

- ◆ Bars/Beats: To start of previous or next bar
- ◆ Min/Sec: Moves in one-second steps
- ◆ Timecode: Moves in one-second steps
- ◆ Feet.Frames: Moves in one-foot steps
- ◆ Samples: Moves in one-second steps

If your system also includes an external transport video or audio tape machine, be sure to configure it in the Peripherals page of the Preferences dialog.

## Scrolling the Edit and Mix Windows from a Control Surface

### To scroll the Edit or Mix windows:

■ Press and hold the COMMAND key, then press an arrow key on any hardware control surface. The arrow keys will then scroll the Edit or Mix window (whichever is frontmost) one page in the direction specified by the arrow.

### To scroll to session start or end:

1 Make sure the Edit window is the active window on-screen.

2 Press COMMAND+OPTION+Left Arrow to scroll to session start, or COMMAND+OPTION+Right Arrow to scroll to session end.

3 If you use the above commands when the Mix window is the active window, it will shift to the first and last bank of faders, respectively.

## Controlling Plug-Ins

Pro Tools lets you control plug-ins from MIDI control surfaces enabled in the Peripherals dialog. When editing plug-in settings, the associated track name is outlined in red in the Pro Tools Mix window.

Since some plug-ins have more controls than a single MIDI control surface, these plug-ins are controlled through a collection of control pages. The MIDI control surface defines a “page size” based on its number of controls, and the plug-in controls are grouped accordingly into pages of this size.

In many cases, there will be a one-to-one relationship between the number of controls and the number of pages. Some plug-ins have an odd number of controls, or have controls that don’t

allow a page break where controls would logically be grouped together. In these cases, there may be plug-in pages that contain “blank” locations where a given control is not active.

The plug-in parameters that a control surface is able to access in the current page will be highlighted blue. Automatable plug-in controls are shown in red when in any write automation mode (Auto Write, Auto Touch, or Auto Latch), and will turn green when in Auto Read.

## Managing Multiple Plug-In and Output Windows

### Control Surface Focus

When you select a Plug-In or Output window for editing on a control surface, it becomes the *control surface focus*. This distinction is indicated by a colored outline surrounding the top panel of the window.


You can use a maximum of two MIDI control surfaces—one Plug-In window and one Output window—simultaneously. You can also use an Ethernet controller for a maximum possible total of three simultaneous targets.

Each of up to three control surfaces will be assigned a color to indicate on-screen which control surface is affecting which window.

When opening multiple windows, press SHIFT while opening a new window to move the control surface focus to the new window. Only one open window at a time can be the control surface focus.


## Automating Plug-In Controls

Pro Tools can automate any plug-in control, as long as the plug-in supports automation.

 *For instructions on automating plug-ins, refer to the Pro Tools Reference Guide.*

On all supported MIDI Control Surfaces except the Mackie HUI, there is no distinction between continuous controls (which vary in level over many steps), and switched controls (which have only *on* and *off* states). On these control surfaces, you use faders or knobs to set values for switched controls on plug-ins.

Plug-in controls are generally mapped from the top left to the bottom right of the plug-in. Some controls may be inactive for certain pages, but each control will appear over the range of pages supported for that plug-in.

 *Plug-in page tables for each of the Digidesign plug-ins are included in online format on the Pro Tools Installer CD-ROM.*

## Third-Party Plug-Ins

Plug-ins from some of Digidesign's Development Partners may need to be updated for compatibility with the automation capabilities of Pro Tools, as well as control surface-based plug-in editing and Librarian functionality. Plug-in control paging behavior is determined by the plug-in software, not by the Pro Tools application. Contact the manufacturer of your plug-in for information about automation support in Pro Tools.



## chapter 2

# Mackie HUI Control Surface

The Mackie HUI (Human User Interface) is a dedicated mixing and editing control surface designed to interface seamlessly with Pro Tools. Dedicated HUI controls allow easy navigation through Pro Tools functions, including mixing, editing, grouping, plug-in control, and automation.

Communication between HUI and Pro Tools is bidirectional, which means that control surface movements from HUI are reflected on-screen in Pro Tools, and changes in Pro Tools are mirrored on HUI.

Key features of HUI include:

### Tactile and Visual Interfacing

- ◆ Eight motorized, touch-sensitive faders with fader bank and channel selectors
- ◆ Illuminated V-POTs (virtual rotary potentiometers) control channel routing, pans, sends, and other values
- ◆ High resolution, LED scribble strip on each channel displays channel identification and assignments
- ◆ Stereo LED meters on each channel

### Dedicated Pro Tools Functions

- ◆ Switches for window selection, groups, editing and transport control
- ◆ Dedicated modifier key switches for Macintosh and Windows
- ◆ Numeric keypad

### Navigation and Cursor Controls

- ◆ Scrub/Shuttle wheel with operation mode switches
- ◆ Zoom/Navigation/Selection cursor switch matrix
- ◆ Time Counter display

### Plug-In Control

- ◆ Dedicated Plug-In section for assigning and editing DSP plug-ins
- ◆ High resolution 40x2 display for plug-in parameters

### Studio Integration

- ◆ Analog control room monitoring section, talkback control, mic preamps

For audio connections, control room functions, and information on the rear panel, refer to the Mackie HUI User's Guide.

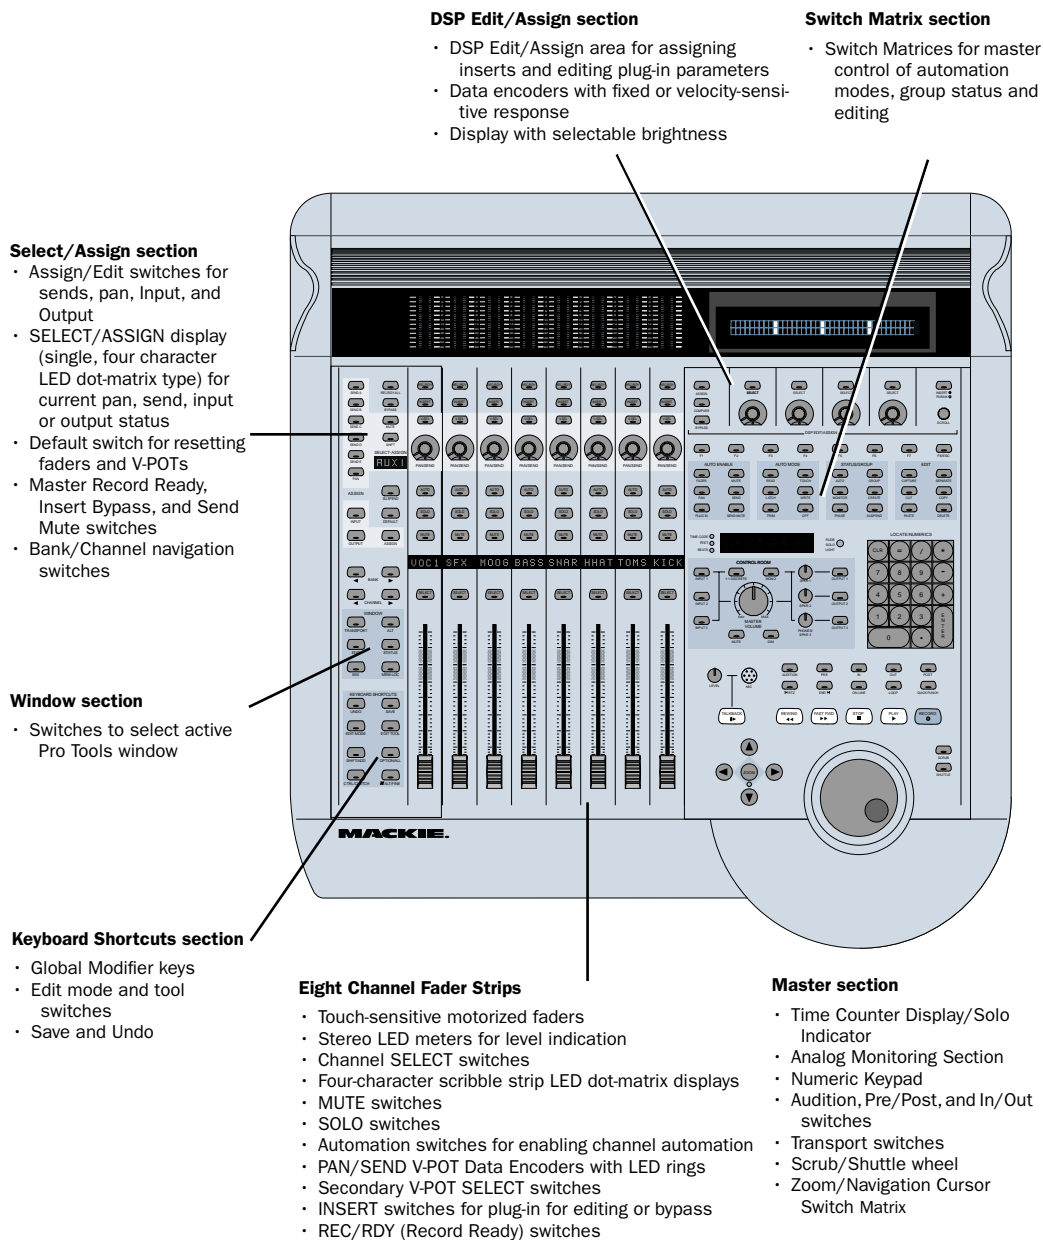


Figure 1. Mackie HUI

## Communication with HUI

Here are some general guidelines for communication between HUI and Pro Tools:

### Pro Tools On-Screen Dialog Warnings

Certain dialog messages that appear on-screen in Pro Tools will also appear in the HUI display. You must close these dialogs before continuing work with the HUI.

### Pro Tools “Lost Communication” Message

If Pro Tools loses communication with the HUI, it will display “OFFLINE” in its Time Counter Display. If this occurs, turn off power to the HUI, wait a few seconds, and then turn on the HUI again. If communication problems persist, check connections to the HUI.

When Pro Tools has reestablished communications with the HUI, the far-right decimal point LED in the Time Code Display will flash, indicating that communication has been established and is valid.


If you are not using the HUI, deselect it in the MIDI control surfaces field in the Peripherals dialog.

### Active in Background Message

In most setups, the Pro Tools Active in Background option should be selected in the Operations menu.

If this option is not selected and another application is brought to the foreground, a warning will appear in the HUI display. Select Operations > Active in Background, and HUI activity will be restored.

## WINDOW Switches

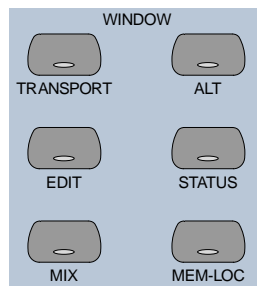

The WINDOW switches control the display of on-screen windows in Pro Tools:

**MIX and EDIT** Bring the window to the foreground. The switch LEDs light to indicate the currently active window.

**TRANSPORT** Opens or closes the Transport window.

**ALT** Opens or closes the floating window for the currently selected plug-in.

**STATUS** Opens or closes the Session Setup window.


**MEM LOC** Opens or closes the Memory Locations window.

The Transport, Memory Location, Session Setup and Inserts/Sends windows are all floating windows. The switches for these windows also bring an open window to the foreground. Pressing its switch closes the window if a floating window is already in the foreground.

### Plug-In Window

The ALT switch opens or closes the Plug-In window for the currently selected plug-in, as indicated in the DSP/EDIT display by the flashing insert on the INSERTS view, or by the currently active plug-in on the PARAM view. When a

plug-in is selected for editing on HUI, the corresponding Plug-In window opens in Pro Tools. Only a single plug-in can be opened and edited at a time.

 You can edit a selected plug-in using the DSP Edit/Assign section on the HUI, regardless of whether or not the floating window for the currently selected plug-in is open.

## Scrolling the Edit and Mix Windows

### To scroll the Edit window:

- While the Edit window is in the foreground, press  $\mathbb{A}$ ALT/FINE+Left or Right Arrow to scroll one page in either direction.


### To scroll the Mix window:

- While the Mix window is in the foreground, press  $\mathbb{A}$ ALT/FINE+Left or Right Arrow to scroll one page in either direction.


### To scroll to session start or end:

- Press  $\mathbb{A}$ ALT/FINE+OPTION/ALL+Left Arrow to scroll to session start.
- Press  $\mathbb{A}$ ALT/FINE+OPTION/ALL+Right Arrow to scroll to session end.


## Analog Monitoring Section

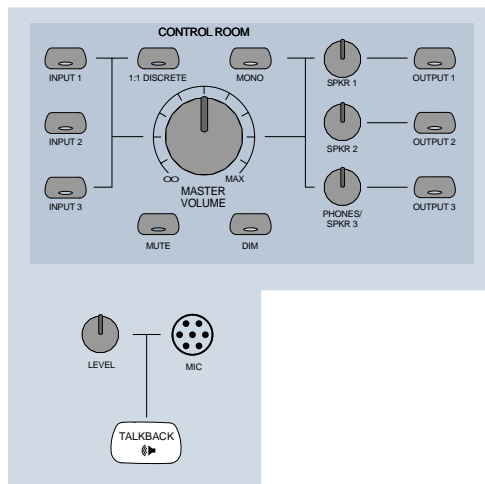

The analog monitoring section provides standard control room, studio cue, talkback, and alternate two-track source monitoring capability. Up to three stereo input sources, and output to any of three stereo destinations are supported. In addition, it can supply a special discrete surround mix monitor mode for 5.1 or LCRS surround mixing.

 To configure and use the analog monitoring section with the rest of your studio, refer to the Mackie HUI User's Guide.

## Level Meters

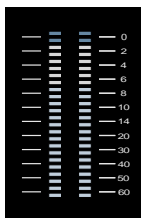

The HUI has eight stereo, 12-segment LED ladders for output level indication of individual channels.

Meters match the peak reading features in Pro Tools (clip hold and separate peak hold). Press the F1 switch in the Function keys section to clear clipped meters and last held peaks indications. Mono channels activate the left side of the meter pair only.

The HUI level meters follow the Pro Tools setting for Pre or Post Fader metering.

## Multi-Channel Metering


### Soloed Multi-Channel Track Display

You can temporarily display the multi-channel outputs of a given track during playback. While pressing the OPTION button, press a track's SOLO switch to solo up to eight streams of a track.

When a multi-channel track is soloed in this manner, the left side channel meters will display the levels of each component of the multi-channel output. Multi-channel tracks up to 7.1 in width (8 channels) can be temporarily soloed and fully metered in this way.

The meters will revert to normal upon release of the OPTION and SOLO buttons.

## Transport Controls

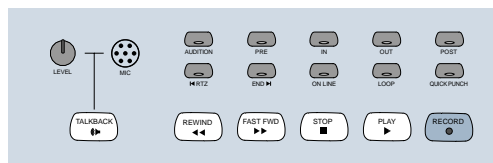

## Transport Switches

The Transport switches correspond to transport functions in Pro Tools.

**RTZ (Return-To-Zero)** Sets playback cursor to the beginning of the session

**END (Go-To-End)** Sets playback cursor to the end of the session

**ONLINE** Places Pro Tools online or offline (LED is lit when Pro Tools is online)

**LOOP** Toggles Loop Playback mode (LED is lit when Loop Playback is enabled) in the Pro Tools Operations menu

**QUICKPUNCH** Toggles QuickPunch recording mode (LED is lit when QuickPunch is enabled) in the Pro Tools Operations menu

**REWIND** Rewinds the session from the current cursor position

**FAST FORWARD** Fast-forwards the session from the current cursor position

**STOP** Stops playback or recording

**PLAY** Begins playback from current cursor position

**RECORD** Arms Pro Tools for recording (LED flashes).

## Fast Forward/Rewind Settings

When the Audio During Fast Forward/Rewind option is selected in the Operation Preferences, you will hear scanned audio (as on a CD player) during rewind and fast forward.

If the Audio During Fast Forward/Rewind option is not selected, you can continuously rewind or fast forward by holding down the corresponding switch. You can also rewind or fast forward incrementally by repeatedly clicking the corresponding switch. The size of these increments depends on which Display mode is currently selected:

- ◆ Bars/Beats: Moves to start of previous or next bar
- ◆ Min/Sec: Moves in one-second increments
- ◆ Timecode: Moves in one-frame increments
- ◆ Feet.Frames: Moves in one-foot increments
- ◆ Samples: Moves in one-sample increments

In addition, there are these shortcuts for transport functions:

- ◆ SHIFT/ADD+PLAY: Initiates half-speed playback
- ◆ SHIFT/ADD+STOP: Aborts the current record pass
- ◆ SHIFT/ADD+FAST FORWARD: Go-To-End
- ◆ SHIFT/ADD+REWIND: Return to zero
- ◆ CTRL/CLUTCH+RECORD: Cycles through record modes (normal, QuickPunch, Loop)
- ◆ CTRL/CLUTCH+ONLINE: Cycles through available machine master choices, as displayed in the Transport window

## Link or Unlink Edit and Timeline

You can link or unlink the Edit and Timeline selections from HUI.

### To link or unlink the Edit and Timeline selections from HUI:

- While pressing SHIFT/ADD, press slash (/) on the numeric keypad for HUI.

## Loop Record Mode

To place Pro Tools into Loop Record Mode, press CTRL/CLUTCH+LOOP.

Loop Record mode is indicated by a loop graphic on the Record button in the Transport window.

## Transport Control of External Devices

The HUI can be used to control devices other than Pro Tools, such as the Alesis ADAT® via MIDI Machine Control, or serial (9-pin) machine control transports (using the Machine-Control™ option for Pro Tools).

### To cycle through available transport master types:

- While pressing the CTRL/CLUTCH switch, press the ONLINE switch.

When Serial Machine is transport master, you can also jog or shuttle the deck by turning the Scrub/Shuttle wheel.

The HUI RECORD switch LED reflects the state of the device under control.

## Footswitch Control

There are two footswitch inputs on the HUI rear panel for transport control.

### Footswitch #1 performs the following functions:


- ◆ If Pro Tools is playing back, press Footswitch #1 to stop.
- ◆ If Pro Tools is recording, press SHIFT/ADD and Footswitch #1 to abort the recording.
- ◆ If Pro Tools is stopped, press Footswitch #1 to start playback.
- ◆ Press SHIFT/ADD and Footswitch #1 to start half-speed playback.

Footswitch #2 performs the following functions:

- ◆ Press Footswitch #2 to toggle the Pro Tools record state on or off.
- ◆ Press CTRL/CLUTCH and Footswitch #2 to cycle through available record modes (destructive or nondestructive).

---

## AUDITION, PRE/POST, and IN/OUT Switches

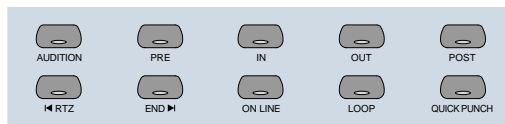

The AUDITION switch is used with the PRE/POST and IN/OUT switches to play currently selected audio. Playback continues until AUDITION is pressed again or until another transport button is pressed.

The PRE and POST switches activate pre-roll and post-roll. These switches also work with the AUDITION switch to audition around various edit areas.

The IN and OUT switches can be used to mark In and Out edit points during playback. These switches also work with the AUDITION switch to audition In/Out edit points.



*You can leave an audition mode at any time, and go to any other audition mode or transport command.*

## Setting Pre and Post Roll

### To enter a pre-roll or post-roll time:

- 1 Press ⌘ALT/FINE+PRE or POST.
- 2 Enter values on the numeric keypad. This enters a pre-roll or post-roll time according to the Grid/Time Display value.
- 3 Press the Left and Right Arrows to cycle through the numeric fields in the Pre-Roll or Post-Roll counters in the Pro Tools Transport window. Press the Up and Down Arrows to increase or decrease the current numeric field value. Press CLR to clear the counters.
- 4 To confirm the entered time value, press ENTER. To enter the same value for both pre-roll and post-roll, press OPTION/ALL+ ENTER.

— OR —

Press F8/ESC to abort numeric entry and leave the times unchanged.

### To manually enter selection start and end times:

- 1 Press  $\mathbb{H}$ ALT/FINE+IN or OUT in the Audition switch matrix.
  - 2 Enter values on the numeric keypad. This enters a Start or End time according to the Grid/Time Display value used in Pro Tools.
  - 3 Press the Left or Right Arrows to cycle through the numeric fields in the Start and End counters in the Pro Tools Transport window. Press the Up or Down Arrows to increase or decrease the current numeric field value. Press CLR to clear the counters.
  - 4 To confirm the entered time value, press the ENTER switch. (To enter the same value for both Start and End times, press the OPTION/ALL+ENTER).
- or –
- Press the F8/ESC switch to abort numeric entry and leave the times unchanged.

## AUDITION Functions

To audition an edit point, press AUDITION and PRE, IN, OUT or POST.

Playback continues until AUDITION is pressed again or until another transport button is pressed.

**PRE** Plays audio starting at the pre-roll point up to the beginning of the selection.

**IN** Plays audio starting at the beginning of the selection and lasting the length of the post-roll amount.

**OUT** Plays audio starting before the selection end point by the pre-roll amount.


**POST** Plays audio starting at the end of a selection and lasting the length of the post-roll amount.

In addition, there are these shortcuts for audition functions:

- ◆ Press  $\mathbb{H}$ ALT/FINE+OPTION/ALL, and PRE or IN to play audio starting at the pre-roll point, continuing through the selection start, and ending after the selection start point by the post-roll amount.
- ◆ Press  $\mathbb{H}$ ALT/FINE+OPTION/ALL, and OUT or POST to play audio starting before the selection end point by the pre-roll amount, continuing through the selection end point, and ending after the selection end point by the post-roll amount.

---

## Time Counter Display and Rude Solo Light



This eight-character, seven-segment LED display shows the current session time position in standard formats, as selected in the Pro Tools software (you cannot select time formats with HUI).

Three LEDs positioned next to the display indicate the current time display mode:

- ◆ TIME CODE: SMPTE format
- ◆ FEET: Feet and Frames
- ◆ BEATS: Bars and Beats
- ◆ All indicator LEDs off: Minutes/Seconds or Samples (depending on the Time Display mode chosen)



## Host Communication Status LED


When Pro Tools is communicating properly with the HUI, the far-right decimal point LED in the Time Code Display will flash.

## Rude Solo Light

The Rude Solo Light flashes whenever there is at least one channel in the current session that is soloed.

---

## Numeric Keypad

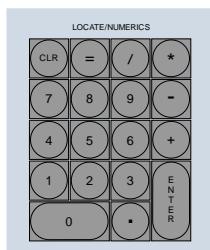

The Numeric Keypad is used for storing and recalling Memory Locations, data entry (such as counter values), and confirming an editing operation. It also supports all Numeric Keypad modes (Classic, Transport and Shuttle) in the Operation preferences.



*Refer to the Pro Tools Reference Guide for details on Numeric Keypad modes.*

- ◆ For dialog messages, press ENTER for OK, and F8/ESC for Cancel.
- ◆ Press ENTER to enter numeric values into Pro Tools counters or displays. Press F8/ESC to cancel numeric entry and leave settings unchanged.
- ◆ Press Forward Slash ("/") to move between fields for Start, End, and Length times in the Edit Window.

### To define a Memory Location or Marker:

- During playback or recording, press ENTER.

### To recall a Memory Location or Marker:


- Press the decimal key once.
- Press a Memory Location or Marker number.
- Press the decimal key again.

### To Set Pre or Post Roll

- Press ⌘ALT/FINE+PRE or POST, then enter values with the Numeric Keypad.

---

## Scrub/Shuttle Wheel

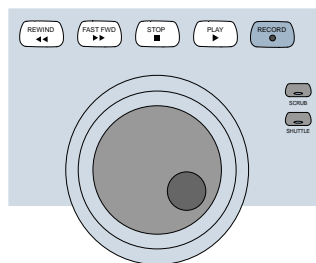

This wheel controls Scrub and Shuttle functions. Pressing the SCRUB and SHUTTLE switches next to the Scrub/Shuttle wheel enables each mode.

When used in conjunction with the Zoom/Navigation/Selection switch quadrant, you can create and adjust region selections with the Scrub/Shuttle wheel.

## Scrub Mode

The HUI Scrub wheel supports Pro Tools positional scrubbing.

### To enable Scrub mode:

- 1 Make sure playback in Pro Tools is stopped.
- 2 Press SCRUB.
- 3 Rotate the Scrub wheel clockwise to scrub forward and counterclockwise to scrub backward.

The start position for Scrubbing is the current selection start point, or current cursor position if there is no selection.

To begin scrubbing from the selection end point, press OPTION/ALL+SCRUB. At any time during scrubbing, press the Left or Right Arrow to move to the selection start or end, respectively.

Normal scrub resolution is dependent on the current zoom level. To get a fixed “fine scrub” resolution regardless of current zoom level, press ⌘ALT/FINE while scrubbing.

### To exit Scrub mode, do any of the following:

- Press STOP or SCRUB
- Press the Spacebar
- Press Escape (F8/ESC)
- Press any other transport switch

## Shuttle Mode

### To enable Shuttle mode:

- 1 Make sure playback in Pro Tools is stopped.
- 2 Press SHUTTLE.
- 3 Rotate the Shuttle wheel clockwise to shuttle forward and counterclockwise to shuttle backward.

The start position for Shuttling is the current selection start point, or current cursor position if there is no selection.

To begin shuttling from the selection end point, press OPTION/ALL+SHUTTLE. At any time during shuttling, press the Left or Right Arrow to move to the selection start or end.

### To exit Shuttle mode, do any of the following:

- Press STOP or SHUTTLE
- Press the Spacebar
- Press Escape (F8/ESC)
- Press any other transport switch

## Shuttle Lock Mode

Press CTRL/CLUTCH and a number on the Numeric Keypad to place the HUI in Shuttle Lock mode. The SHUTTLE switch LED lights while in Shuttle Lock mode. This mode uses the Numeric Keypad to control shuttle speed (0–9; “0” is off), as well as the +/- switches to control the playback direction. The wheel can also be used to adjust these parameters while in Shuttle Lock. Press STOP or SHUTTLE to exit Shuttle Lock mode.

## Scrub/Shuttle “Lock Out” Behavior

When scrub or shuttle is engaged, only certain controls are available:

- ◆ Channel faders, Mute and Solo switches
- ◆ Scrub/Shuttle wheel and switches
- ◆ Any transport switch (disengages Scrub and Shuttle modes)
- ◆ ENTER (creates a Memory Location)

## Scrub/Shuttle Operation using Serial Machine Control

You can also use the Scrub/Shuttle wheel to scrub (jog) or shuttle an external, serial machine control-capable deck if you are using the Digidesign MachineControl software option.

**When Serial Machine is transport master, you can do the following:**

- Press SCRUB and turn the wheel to jog the external machine.
- Press SHUTTLE and turn the wheel to shuttle the external machine.
- To leave either mode, press SCRUB or SHUTTLE again, or press any other transport switch.

## Creating Selections Using the Scrub/Shuttle Wheel

You can create and modify on-screen selections using the Scrub/Shuttle wheel.

**To create selections using the Scrub/Shuttle wheel:**

- While pressing SHIFT/ADD, press SCRUB or SHUTTLE. The start position is the current selection's start point, or current location of the cursor if there is no selection.

To SCRUB or SHUTTLE from the selection end point, press OPTION/ALL+SCRUB or SHUTTLE.

**To modify the end of an existing selection:**

- While pressing SHIFT/ADD and OPTION/ALL, press SCRUB or SHUTTLE and use the Scrub/Shuttle wheel to make your modifications.

**To modify the beginning of an existing selection:**

- While pressing SHIFT/ADD, press SCRUB or SHUTTLE and use the Scrub/Shuttle wheel to make your modifications.

You can navigate to the start or end of your selection at any time by pressing the Left or Right Arrow keys.

## Insertion Follows Scrub/Shuttle Preference

How you work with the Scrub/Shuttle wheel depends on whether you select the “Edit Insertion Follows Scrub/Shuttle” Operation preference in Pro Tools.

**If “Insertion Follows Scrub/Shuttle” is selected:**

- Press SCRUB or SHUTTLE and move the wheel to clear the current selection and move the cursor.
- Press SHIFT/ADD before pressing SCRUB or SHUTTLE, or before moving the wheel, to keep the current selection. As you move the wheel, the selection is expanded or trimmed.
- While pressing SHIFT/ADD and OPTION/ALL, press SCRUB or SHUTTLE and use the Scrub/Shuttle wheel to further modify the end of your selection.

### If “Insertion Follows Scrub/Shuttle” is not selected:

- Press SCRUB or SHUTTLE and turn the wheel to keep your current selection and move the cursor outside of the selection.
- Press SHIFT/ADD and turn the wheel to clear the current selection and create a new one. The new selection starts wherever you first press SHIFT/ADD.
- Release SHIFT/ADD to move the cursor outside the new selection.
- Press SHIFT/ADD additional times to trim the new selection as needed.

### Scrub/Shuttle Tips

- ◆ At any time during scrubbing or shuttling, you can press the Left or Right Arrow to move the current scrub position to the selection start or end.
- ◆ You can freely move between scrub and shuttle modes. The current SCRUB or SHUTTLE position is retained.
- ◆ If you enter scrub or shuttle but don’t move the wheel or mouse, you can exit Scrub or Shuttle mode without affecting the current selection.

### To define a selection using a combination of SCRUB or SHUTTLE functions:

- 1 Press SHUTTLE to enter Shuttle mode.
- 2 Shuttle along the timeline. When you get to roughly the selection in-point, press SHIFT/ADD.
- 3 Continue shuttling down the timeline. When you get to roughly the out-point, release SHIFT/ADD. Your “rough selection” is now defined.
- 4 Press SCRUB to enter Scrub mode.

5 Press the Left Arrow key to move the scrub position to the selection start.

6 Press SHIFT/ADD (to retain the selection), and scrub the selection in-point until you reach the desired location.

7 Press the Right Arrow key to move the scrub out-point to the selection end.

8 Press SHIFT/ADD (to retain the selection), and scrub the selection out-point until you reach the desired location.


### Capturing Memory Locations

When working with Scrub and Shuttle functions, you can do the following:

- ◆ Memory Locations can be captured at any time by pressing the ENTER key on the HUI numeric keypad.
- ◆ Press the Up Arrow to free the cursor without capturing a Memory Location.

---

## Keyboard Shortcuts Section



### Save and Undo Switches

The UNDO switch will Undo or Redo the last edit operation. Its LED is lit when Undo is available for use after an operation. Its LED flashes when Redo is available.

The SAVE switch LED is lit if the session has changed from its currently saved state.

**To save the changes in a session:**

- 1 Press SAVE. The SAVE switch LED flashes when first pressed, indicating the Save process has been armed.
- 2 Do one of the following:
  - To complete the Save process, press the SAVE switch again.
  - To abort the Save process, press the F8/ESC switch.


**EDIT MODE and EDIT TOOL Switches**

The EDIT MODE and EDIT TOOL switches access the primary Edit function modes and tools:

**EDIT MODE** Cycles through the four edit modes: Shuffle, Slip, Spot, and Grid.

**EDIT TOOL** Cycles through the main edit tools: Zoom, Trim, Select, Grabber, Smart Tool, Scrub, and Pencil.

**Smart Tool** Press EDIT TOOL+7 (on the numeric keypad) to select the Smart Tool.

 *Refer to the Pro Tools Reference Guide for details on Edit Tool functions.*

You can directly select an Edit Tool or Edit mode using key combinations with numbers on the HUI Numeric Keypad:

Key Combination	Edit Mode or Tool
EDIT MODE+1	Shuffle mode
EDIT MODE+2	Slip mode
EDIT MODE+3	Spot mode
EDIT MODE+4	Grid mode
EDIT TOOL+1	Selects Zoom tool
EDIT TOOL+2	Selects Scrub tool
EDIT TOOL+3	Selects Trim tool
EDIT TOOL+4	Selects Select tool
EDIT TOOL+5	Selects Grabber tool
EDIT TOOL+6	Selects Pencil tool
EDIT TOOL+7	Selects Smart tool

**Edit Tool Selection**

The Trimmer, Grabber, and Pencil each have different tool options available from their pop-up menus in the Edit window in Pro Tools. These different tool options can also be selected from HUI.

**To select an Edit tool from HUI:**

While pressing EDIT TOOL, do one of the following:

- Press 3 on the numeric keypad to select and cycle through the Trimmer tools.
- Press 5 on the numeric keypad to select and cycle through the Grabber tools.
- Press 6 on the numeric keypad to select the Pencil tool and cycle through the Pencil Shapes.


The toolbar in the Pro Tools Edit window displays the currently selected Edit tool.

## Extending Region Selections

Pro Tools provides several key commands for changing or extending region selections in the Edit window. When the HUI arrow keys are in region navigation mode:

- ◆ CONTROL+Left Arrow: Selects the previous region.
- ◆ CONTROL+Right Arrow: Selects the next region.
- ◆ CONTROL+SHIFT+Left Arrow: Extends the selection to include the previous region.
- ◆ CONTROL+SHIFT+Right Arrow: Extends the selection to include the next region.

## EDIT Switches

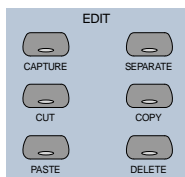


Pro Tools edit functions are accessible from the HUI. These are CAPTURE, SEPARATE, CUT, COPY, PASTE and DELETE.

## Modifier Key Switches

At the bottom of the Keyboard Shortcuts section there are the global Modifier switches: SHIFT/ADD, OPTION/ALL, CTRL/CLUTCH and ⌘ALT/FINE. These modify the action of other switches. For example, while pressing the OPTION/ALL switch, you can press the SOLO switch to solo all channels.

All modifier switches are reciprocal between the computer keyboard and the HUI.

## Zoom Switch Quadrant

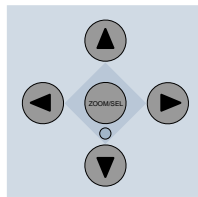

This switch group consists of four arrows plus the ZOOM/SEL switch, which cycles the switch quadrant through three different modes.

## Navigation Mode

In Navigation mode, the ZOOM switch LED is off. The switch quadrant acts as region/edit/track location selector.

### To position the edit cursor:

- ◆ Left Arrow: Moves the edit cursor to previous region boundary or sync point.
- ◆ Right Arrow: Moves the edit cursor to next region boundary or sync point.

### To extend the edit selection:

- ◆ Press SHIFT/ADD to extend the selection
- ◆ SHIFT/ADD+Left Arrow will select the preceding region boundary
- ◆ SHIFT/ADD+Right Arrow will select the forward region boundaries

### To center selection points on screen:

- ◆ OPTION/ALL+Left Arrow (or the IN transport switch): Centers the left side of the current on-screen waveform selection in the Edit Window.
- ◆ OPTION/ALL+Right Arrow (or the OUT transport switch): Centers the right side of the on-screen waveform selection in the Edit Window.

## Marking In and Out

The Up and Down Arrows can be used as mark-in and mark-out controls. You can also do this with the HUI “In” and “Out” switches in the AUDITION switch row.

## Moving the Edit Cursor and Edit Selection to Adjacent Tracks

The Up and Down Arrows can also be used to move the Edit cursor to the next or previous track. In addition, you can move or extend Edit selections to the next or previous track.

### To move the Edit cursor or an Edit selection to the previous or next track from HUI:

- 1 Make sure the ZOOM/SEL switch is in Navigation mode. If necessary, press the switch until it becomes unlit.
- 2 Press UP or DOWN to move the cursor or selection to the previous or next track.

### To extend an Edit selection to the previous or next track from HUI:

- 1 Make sure the ZOOM/SEL switch is in Navigation mode. If necessary, press the switch until it becomes unlit.
- 2 While pressing SHIFT/ADD, press UP or DOWN to extend the selection to the previous or next track.

## Zoom Mode

Press the Zoom switch once to enter Zoom mode. The ZOOM switch LED lights to indicate Zoom mode. The switch quadrant controls the waveform zoom display.

### To adjust the zoom view:

- ◆ Left Arrow: Decreases horizontal zoom
- ◆ Right Arrow: Increases horizontal zoom

- ◆ Up Arrow: Increases vertical zoom
- ◆ Down Arrow: Decreases vertical zoom

## Zoom Presets

You can store and recall Zoom Presets from HUI.

### To recall a Zoom Preset from HUI:

- While pressing OPTION/ALL, press the Zoom Preset's number on the numeric keypad.

### To store a Zoom Preset from HUI:

- While pressing SHIFT/ADD, type the Zoom Preset's number on the numeric keypad.

## Selection Mode

In Selection mode, the ZOOM switch LED flashes. In this mode you can create and adjust waveform selections in conjunction with the Scrub/Shuttle Wheel.

### To make a selection:

- 1 Press the ZOOM/SEL switch until the center switch LED flashes.
- 2 Press the Left Arrow switch and move the wheel to adjust the selection in-point.
- 3 Press the Right Arrow switch and move the wheel to adjust the selection out-point.

You can you define on-screen selections for editing, or move your set selection length around the screen.

If you have defined a selection in which you want to perform a series of fader and pan moves, you can use the Pro Tools Loop Playback mode to rehearse them over selection.

## Selection Tips

These tips can also be helpful in making your selection:

- ◆ Press ⌘ALT/FINE to scrub at a fixed fine resolution, regardless of the current zoom settings.
- ◆ Press SHIFT/ADD to make a new selection while scrubbing or shuttling. Release SHIFT/ADD to complete the selection.
- ◆ Press OPTION/ALL to begin scrubbing or shuttling from the end of a selection

Once you have finished making a selection, you can adjust it using the following keyboard shortcuts while still in Scrub or Shuttle mode:

### To position the edit cursor at a selection's edge:

- ◆ Double-click the Left Arrow to position the cursor at the current selection's left edge
- ◆ Double-click the Right Arrow to position the cursor at the current selection's right edge

### To move the edit selection:

- ◆ Up Arrow: Moves the selection to the previous track
- ◆ Down Arrow: Moves the selection to the next track

### To adjust selection points:

- ◆ Left Arrow+Scrub/Shuttle wheel adjusts the selection IN point
- ◆ Right Arrow+Scrub/Shuttle wheel adjusts the selection OUT point
- ◆ Left Arrow+Right Arrow+Scrub/Shuttle wheel adjusts the selection's time position while retaining its duration

### To extend the edit selection:

- ◆ SHIFT/ADD+Up Arrow extends the selection to the previous track
- ◆ SHIFT/ADD+Down Arrow extends the selection to the next track
- ◆ OPTION/ALL+Up Arrow removes the selection from the topmost track
- ◆ OPTION/ALL+Down Arrow removes the selection from the bottommost track

## Navigating On-Screen View of Pro Tools

You can also use the switch quadrant to navigate the Pro Tools on-screen view. The following switch functions apply to all three switch modes (Navigation mode, Zoom mode, and Selection mode):

### To scroll the session view one window at a time:

- ◆ ⌘ALT/FINE+Left Arrow: Scrolls the frontmost window to the left
- ◆ ⌘ALT/FINE+Right Arrow: Scrolls the frontmost window to the right
- ◆ ⌘ALT/FINE+Up Arrow: Scrolls the frontmost window upward
- ◆ ⌘ALT/FINE+Down Arrow: Scrolls the frontmost window downward


### To scroll to the beginning, end, top, or bottom of the session view:

- ◆ OPTION/ALL+ALT/FINE+Left Arrow: when the Edit window is in the foreground, scrolls to the beginning of the session.
- ◆ OPTION/ALL+ALT/FINE+Right Arrow: when the Edit window is in the foreground, scrolls to the end of the session.



- ◆ **OPTION/ALL+ALT/FINE+Up Arrow:** when the Edit window is in the foreground, scrolls to the top of the session.
- ◆ **OPTION/ALL+ALT/FINE+Down Arrow:** when the Edit window is in the foreground, scrolls to the bottom of session.

## Bank Swapping and Channel Scrolling

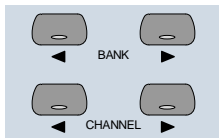

Bank swapping and channel scrolling behavior is mirrored in Pro Tools. Pro Tools channels are banked into view automatically (unless this function is disabled in Pro Tools Preferences). Bank members are shown on-screen with high-lighted channel names.

### To scroll channels to the left or right one at a time:

- Press the left or right CHANNEL arrow switches

### To swap channels to the left or right eight at a time:

- Press the left or right BANK arrow switches


### To bank swap to the far-left or far-right bank position in a session:

- Press **OPTION/ALL+left** or **right BANK** or **CHANNEL** switch

## Channel Fader Strip and Select/Assign sections

The Channel Fader Strip section is used with the global **SELECT/ASSIGN** switch section located to the left of the channel strips.

### Channel Fader

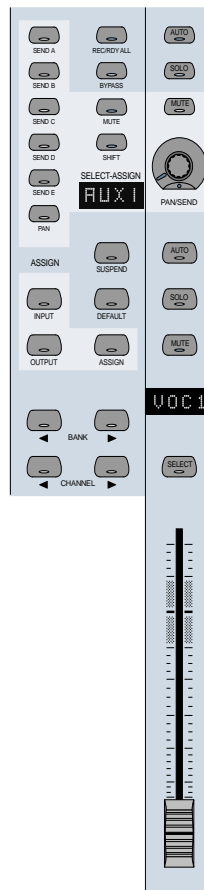

The channel faders are used for level control of disk tracks, master faders, auxiliary inputs, and MIDI tracks. Gain calibration ranges from infinity (bottom of fader travel) to +6 dB (top of fader

travel). The HUI channel fader tapering scheme provides resolution of 8.8 dB per MIDI value in the -60 to -70 dB range, and 2.5 dB per MIDI value in the -70 to -100 dB range. This results in smooth fade outs to silence at low level.

### **CTRL/CLUTCH “Clutch” mode with Faders**

To disengage faders from any Mix groups, holding down the CTRL/CLUTCH switch. After releasing the CTRL/CLUTCH switch, the fader obeys group behavior again.

### **Moving Grouped Faders**

The first fader in a mix group touched in any single mix operation becomes the group master. When the group master is established, faders that are in the same mix group and not concurrently touched will also move in a relative fashion. However, faders that are in the same mix group and concurrently touched are temporarily disengaged from the group, and will move independently of the mix group. Once a fader that is temporarily disengaged is released, it will resume following the mix group master’s movements.

When the group master is released, if there are any faders in the mix group that are concurrently being touched, the fader that was touched earliest in time becomes the new group master. Subsequent moves of this new group master will cause all other untouched faders in the mix group to follow.

## **Channel Scribble Strip LED Display**



The scribble-strip LED display shows an abbreviated version of the channel name that appears in Pro Tools. In certain cases during edit operations, the scribble strip temporarily displays a parameter name or value, and then reverts to the channel name.

The channel scribble strip also displays the following information:

**Automation Status** To display current automation mode for the channel, press the channel strip AUTO switch, or the master AUTO switch in the STATUS/GROUP switch matrix.

**Group Membership Status** To display the Group ID for the channel, if any, press the GROUP switch in the STATUS/GROUP switch matrix.

**Global Disk Track Monitor Status** To display whether Pro Tools is in “Auto Input” or “Input Only” mode on all channel scribble strips, press the MONITOR switch in the STATUS/GROUP switch matrix.

**Channel Strip Input Source** To display the current input source for all channel strips, press the master INPUT switch in the Select/Assign section.

**Channel Strip Output Destination** To display the current output source status for all channel strips, press the OUTPUT switch in the Select/Assign section.

**Send Destination** To display send destination status for any send on all channel strips, press any master SEND switch (A–E) in the Select/Assign section.

**Pre/Post Send Display** Displays the pre or post status of an individual send when changing it with the channel's V-SEL switch.

**Level display** Displays level in dB on the when you press  $\mathbb{H}$ ALT/FINE and move a fader.

**Numeric PAN position** Displays numeric pan value when you press  $\mathbb{H}$ ALT/FINE and move the channel's V-POT while in pan display mode.

## Assigning MIDI Outputs

You can view and assign channel outputs for MIDI tracks. You can also assign multiple MIDI channels to a single track.

### To assign MIDI outputs from HUI:

- 1 Press ASSIGN+OUTPUT.
- 2 Use the Rotary Data Encoder for the track to select the MIDI device and channel.
- 3 While the channel is selected, press the V-SEL switch.



*If assigning multiple MIDI channels, perform steps 2 and 3 while pressing SHIFT/ADD.*

- 4 When MIDI output assignment is completed, press the Master ASSIGN switch to confirm and exit Assign mode.

## Assigning Multiple Outputs

HUI supports the ability to assign multiple outputs to a Pro Tools track.

### To assign an additional output to a channel:

- 1 Press the master ASSIGN and OUTPUT switches (in the Select/Assign section).
- 2 On the appropriate channel, rotate the encoder until it displays the additional output you want to assign. The currently assigned output (if any) is indicated with the > symbol (for example, ">Out 1-2").
- 3 Press CTL|CLUTCH + ASSIGN to confirm the additional output assignment. Use the channel Assign/Mute or master Assign switch as needed:
  - The channel Assign/Mute switch confirms the setting and leaves HUI in Assign mode. Use this to continue assigning other channels.
  - Pressing the master ASSIGN switch confirms and exits Assign mode. Use this when you are through assigning channel outputs.

### Display of Multiple, and Inactive Assignments

Multiple output assignments are indicated with "+" in front of the assigned path's names. For example, +Out 1-2.

Other symbols indicate inactive status (see "Inactive Outputs" on page 30).

## Display of Inactive Items

The @ symbol indicates inactive status for the following items:

- Inputs
- Outputs
- Sends
- Inserts
- Tracks
- Plug-Ins, when unavailable or missing
- Paths that are inactive in the I/O Setup dialog

## Inactive Outputs

HUI uses two symbols to display the different inactive states possible for outputs.

@ Indicates that only one output is assigned, and it is currently inactive. (For example, @Out 1-2.)

\* Indicates more than one output is assigned, at least one of which is inactive. (For example, \*Out 1-2.)

## SELECT Switch



When a channel is selected, its SELECT switch LED lights. Selected channels remain selected even when not displayed in the current bank view.

### To select multiple channels:

- While pressing a channel's SELECT switch, press SELECT switches on additional channels.

### To deselect a single channel:

- Press SHIFT/ADD+ the SELECT switch on the channel.

### To select or deselect multiple channels:

- Press SHIFT/ADD+SELECT switches on additional channels.

### To select or deselect all channels:

- Press OPTION/ALL+ any SELECT switch.

### To change the SELECT state of a channel, and change all other channels to the opposite state:

- Press ⌘ALT/FINE+ any lit SELECT switch.

## REC/RDY Switch



The REC/RDY (Record Ready) switch enables a track for recording. The REC/RDY switch LED flashes when engaged (Record-ready) and remains lit when Pro Tools begins recording (Record).

## MASTER REC/RDY Switch

This switch acts as a REC/RDY master for disk tracks. If no channels are record-enabled, this switch enables all tracks. If any disk track in the session is enabled for recording, the MASTER REC/RDY switch flashes. If any tracks are record-enabled, pressing the MASTER REC/RDY switch disables all tracks.

### To record enable all tracks:

- Press OPTION/ALL+ any REC/RDY switch that is not record-enabled. This record-enables all tracks up to the maximum number of voices available for recording in your system.

### To disable all tracks for recording:

- Press OPTION/ALL+ any REC/RDY switch that is already record-enabled.

### To toggle all enabled REC/RDY switches on and off:

- Press the Master REC/RDY ALL switch located in the Select/Assign section.

### To record enable selected tracks only:

- Press OPTION/ALL+SHIFT/ADD+ the REC/RDY switch on any of the selected tracks.

## SOLO and MUTE Switches



When the MUTE and SOLO switches are enabled, their LEDs light.

Soloed channels flash the MUTE switch LEDs on all other channels that are not explicitly muted. The MUTE switch LEDs on channels that are explicitly muted when others are soloed are lit continuously.

### To enable Solo or Mute on multiple channels:

- ◆ OPTION/ALL+SOLO: Enables or clears Solos on all channels
- ◆ OPTION/ALL+SHIFT/ADD+SOLO: Enables or clears Solos on all selected channels
- ◆ OPTION/ALL+MUTE: Enables or clears mutes on all channels
- ◆ OPTION/ALL+SHIFT/ADD+MUTE: Enables or clears mutes on all selected channels

These keyboard shortcuts do not apply to send mutes when using the V-SEL switch.

## Pro Tools Solo and Mute Preferences

The following Pro Tools preferences are related to solo and mute behavior:

**Solo Safe** Locks out Solo Safe channels from implied mute state when other channels are soloed.

**Latch Solo Switches** Determines whether pressing the SOLO switch on additional channels adds to the current solo selection (known as additive or latch on soloing), or only one channel may be soloed at a time. This is defined in the Pro Tools Operation Preferences.

**Solo/Mute Follow Mix Groups** Determines whether soloing or muting individual members of a mix group changes the status of the entire group, or only of the individual member. If this preference is enabled, an individual member can still be changed independently of its group by pressing the CTRL/CLUTCH switch. This is defined in the Pro Tools Automation Preferences.

## Solo Safe and Record Safe Modes

Channels can be placed into Solo or Record Safe modes in which they are locked out from implied mute or record states. Solo Safe channels can still be muted.

**To enable or clear Solo or Record Safe on a channel:**

- Press ⌘ALT/FINE+ the SOLO or REC/RDY switch on the channel.

The SOLO or REC/RDY switch on the HUI flashes briefly to indicate the channel is in Solo Safe or Record Safe mode. Pro Tools grays out the associated Solo or Record button on-screen.

**To enable or clear Solo or Record Safe status on a multiple channels:**

- ◆ OPTION/ALL+ALT/FINE+SOLO or REC/RDY on any channel enables or clears Solo Safe or Record Safe status on all channels
- ◆ OPTION/ALL+ALT/FINE+REC/RDY ALL enables or clears Record Safe status on all channels
- ◆ SHIFT/ADD+OPTION/ALL+⌘ALT/FINE+SOLO or REC/RDY on any channel enables or clears Solo Safe or Record Safe status on only selected channels

## AUTO and SUSPEND Switches



### AUTO Switch

The AUTO switch changes the channel's automation mode, when used in combination with the Automation mode section switches: WRITE, TOUCH, LATCH, TRIM, READ, and OFF.

The channel strip AUTO switch LED lights to indicate the various automation modes:

**Red (flashing)** Pro Tools is armed for automation in one of three modes: Write, Touch, or Latch.

**Red (lit continuously)** Pro Tools is writing automation in one of the three modes: Write, Touch, or Latch.

**Green (lit continuously)** Automation Read mode is enabled.

**Off** Automation playback is disabled.

Automation modes are abbreviated in the channel LED scribble strip as follows.

Automation Mode	Scribble Strip Abbreviation
Write	Wrt
Touch	Tch
Latch	Ltch
Trim	Trim
Read	Read
Off	Off

### Selecting Automation Modes

There are three ways to change automation modes: on individual channels, on multiple channels across several banks, and on all channels.

#### Individual Channels

This method is quickest for changing the automation mode of individual channels within the same bank.

#### To change automation mode on a channel:

- While pressing an Automation mode switch (WRITE, TOUCH, LATCH, TRIM, READ, or OFF), press the channel's AUTO switch.

#### Multiple Channels

This method is quickest for changing the automation mode for a discontinuous selection of channels, or for channels that are on different banks.

#### To change automation mode on multiple channels:

- 1 Select multiple channels by pressing their SELECT switches. Using the BANK switches, you can select channels in other banks.
- 2 Press OPTION/ALL+SHIFT/ADD and an Automation mode switch (WRITE, TOUCH, LATCH, TRIM, READ, or OFF). All selected channels change to the selected mode.

When you select channels, they obey Mix group behavior. To suppress group behavior, press the CTL/CLUTCH switch, or suspend groups using the SUSPEND switch.

#### All Channels

This method changes the automation mode of all channels on all banks.

#### To change automation mode on all channels:

- While pressing OPTION/ALL, press an Automation mode switch.

### TRIM Mode

#### (TDM Systems Only)

Pro Tools TDM systems allow you to adjust (or *trim*) existing Track Volume and Send Level automation data in real time.

Trim mode works with the other automation modes (Read, Touch, Latch, and Write) to affect how existing automation data is trimmed.

See "Trim Automation Mode" on page 48 for details on using Trim mode with the HUI. Refer to the *Pro Tools Reference Guide* for more information on Trim mode.

## SUSPEND Switch



The SUSPEND switch in the Select/Assign section globally suspends all automation recording and playback. When automation is suspended, the SUSPEND switch LED flashes.

To suspend automation, the Pro Tools transport must be stopped.

## INSERT Switch



You can execute the following functions with the INSERT switch:

### To edit a single Plug-In:

- Press the INSERT switch on the corresponding channel to show it in the DSP Edit/Assign display. In this mode, only one insert may be accessed at a time.

### To bypass or enable all Plug-Ins on all inserts for a channel:

- Enable the Master BYPASS switch (so its LED is lit) and press the INSERT switch on that channel.


### To bypass Plug-Ins on all channels:

- Enable the Master BYPASS switch (so its LED is lit), and press OPTION/ALL+ the INSERT switch on any channel.

**⚠** You cannot bypass Hardware I/O inserts from Pro Tools. To monitor playback without a hardware insert, either set the Insert Type Selector to “No Insert” or use a bypass switch on the hardware device itself.

---

## Master BYPASS Switch



The Master BYPASS switch in the Select/Assign section globally changes the INSERT switches into BYPASS switches for all plug-ins on a channel, allowing you to bypass all plug-in inserts for the selected channel in a single operation.

### To bypass all Plug-In inserts on a channel:

- 1** Press the master BYPASS switch in the Select/Assign section (*not* the DSP Edit/Assign section). Its LED lights to indicate master bypass mode is enabled.
- 2** In Master Bypass mode, the INSERT switch for each channel in the current bank displays one of three bypass states:

**INSERT switch LED is unlit** None of the plug-in inserts on the channel are currently bypassed.

**INSERT switch LED is lit** All of the plug-in inserts on the channel are bypassed.

**INSERT switch LED flashes** Some but not all of the plug-in inserts on the channel are bypassed.

- 3** Do one of the following:

- ◆ To toggle the bypass status on or off for all plug-in inserts on a channel, press any INSERT switch on that channel.



When only some of the plug-in inserts on a channel are bypassed, pressing the INSERT switch for the first time *turns off* bypass on all plug-in inserts for the channel. Pressing the INSERT switch a second time bypasses all plug-ins.

- ◆ To change the bypass status of all plug-in inserts on all channels, press OPTION/ALL+ any INSERT switch.

- ◆ To change the bypass status of all plug-ins on all selected channels, press OPTION/ALL+SHIFT/ADD+ any INSERT switch.

**!** *The Master BYPASS switch in the Select/Assign section functions differently from the BYPASS switch in the DSP Edit/Assign section. See “BYPASS Switch” on page 46.*

---


## V-SEL Switch



The V-SEL (“V-POT SELECT”) switch serves several functions:

- ◆ Assigns send or I/O routing for an individual channel
- ◆ Acts as a Send Mute switch when the Master MUTE switch in the Select/Assign section is engaged (LED is lit)
- ◆ Selects pre or post status for the send. While in Flip mode, the V-SEL switch continues to control send pre or post operation regardless of the current state of the master MUTE/PREPOST switch.
- ◆ Selects fader or V-POT to revert to default setting, when used with the DEFAULT (Quick-Mode) switch.

## PAN/SEND V-POT Encoder

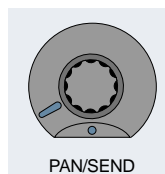

When used with the switches in the Select/Assign section, the PAN/SEND V-POT is used to edit channel pan, send levels and send pan settings (in Flip mode, explained later in this chapter).

For fine adjustments, press the ⌘ALT/FINE switch while turning a channel V-POT.

The V-POT is also used to assign send and I/O routing for individual channels. See “DSP SELECT switches and V-POT encoders” on page 43.

The V-POT acts as a virtual knob, with LED ring lights that represent the “knob value” for send levels and pan settings. When showing send levels, the V-POTs display a continuous series of LEDs.

When showing pan position, an individual LED from the ring lights to indicate relative pan position, while a special “6 o’clock” LED lights to indicate a centered pan position.

The V-POTs audibly click when assigning send and I/O destinations, as well as when editing insert assignments and plug-in parameters in the DSP Edit/Assign section. This audible click functionality can be enabled or disabled by pressing the F3 switch in the F-key switch section.

---


## Adjusting Channel Pan

**To edit pan positions on channels:**

- 1 Press the PAN switch in the Select/Assign section.
- 2 When the PAN switch is first enabled, a stereo channel's V-POT defaults to control the left channel pan (or the single pan control on mono channels). The SELECT/ASSIGN LED displays "Pan."
- 3 On stereo channels, press the PAN switch a second time to edit the right channel pan. The SELECT/ASSIGN LED displays "PanR," and the PAN switch LED flashes.


The V-POT LED collar indicates pan position with a single LED. The 6 o'clock LED in the collar of the V-POT encoder lights when the pan setting is centered. If there is no pan associated with a channel (such as a Master Fader), none of the collar LEDs on its V-POT will light.

The rotary encoders on the HUI channel strips (which are used for adjusting send levels and pan controls) are not velocity sensitive; they operate in fixed mode only.

 See "Rotary Knob Settings" on page 43 for more details regarding velocity-sensitive features of the V-POTs.

---

## STATUS/GROUP Switches

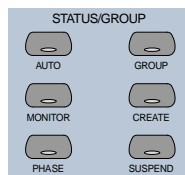

These switches are used to show and change group status and carry out grouping functions, using the channel scribble strips.

### AUTO and GROUP Switches

The AUTO and GROUP switches allow you to show the current automation mode or grouping status of a bank of channels.

**To view the Automation status of the current channel bank:**

- Press the AUTO switch. The channel LED scribble strips display the automation mode for each channel.

**To view the Group status of the current channel bank:**

- Press the GROUP switch. The channel LED scribble strips display the Group ID letter. A lowercase letter indicates the channel is a member of one group; an uppercase letter indicates the channel is a member of multiple groups, with the topmost group ID displayed.

### PHASE Switch

Functionality for the PHASE switch has not been implemented.

## MONITOR Switch

Press the MONITOR switch to display monitor assignment on the channel scribble strips. Monitor mode is changed in the Pro Tools Operations menu.

### To view the Monitor status of the current bank:

- Press the MONITOR switch. The current monitor status of channels is displayed:
- ◆ Auto: Auto Input mode
- ◆ Inpt: Input Only mode
- ◆ Aux: Channel is an Auxiliary Input
- ◆ MIDI: Channel is a MIDI track
- ◆ Mstr: Channel is a Master Fader

---

## Working with Groups

In addition to viewing channel status, you can create, enable, and suspend groups from the switch matrix.

### To create a group:

- 1 Select two or more channels by pressing SHIFT/ADD+ the SELECT switches on the channels.
- 2 In the STATUS/GROUP switch matrix, press CREATE. The next available default group name is indicated.
- 3 Do one of the following:
  - ◆ Press ENTER on the HUI Numeric Keypad to accept the default group name and ID.
  - ◆ Type a name, select a different Group ID, or overwrite an existing group definition, and press ENTER.

## SUSPEND Switch

### Suspend Groups

All Mix groups can be temporarily suspended by pressing SUSPEND in the Status/Group section. Pressing this switch again returns to the previous Group status. When SUSPEND is enabled, the SUSPEND switch LED flashes. When SUSPEND is disabled, the LED turns off.

The SUSPEND switch LED mirrors the state of the Mix groups, but ignores Edit groups.

---

## Select/Assign section

### Pan, Input/Output, Sends



The V-POT encoder function for active channels is assigned from the SELECT/ASSIGN switch section. You can also change send or I/O destinations from this section. I/O destinations for individual channels can be shown in the SELECT/ASSIGN LED. Only one of the SELECT/ASSIGN switches can be active at a time.

---

## Working with Sends and Plug-Ins

### Send and I/O Assignment

The routing of sends and I/Os can be assigned from HUI. Destinations can be assigned on a single channel or a group of channels at once.

Assignments cannot be made when Pro Tools is playing back or recording. If you are in Assign mode and start playback or recording in Pro Tools, the Assign process is cancelled.

#### To assign sends or I/Os on a single channel:

- 1 Press ASSIGN in the Select/Assign section.
- 2 Press a SEND switch (A–E) or INPUT/OUTPUT switch.
- 3 Rotate the channel V-POT to cycle through a list of source (or destination) choices, which appear in the scribble strip display. The V-SEL switch flashes to indicate that the original assignment, if any, has been changed.
- 4 When a menu choice is reached, you can finalize the assignment in one of two ways:
  - ◆ Press ASSIGN to confirm all of your assignments at once.
  - or –
  - ◆ Press the channel's V-SEL switch. This confirms the assignment for that channel, and leaves you in Assign mode.

You can cancel at any time by pressing the F8/Escape switch.

#### To assign the destinations of sends or I/Os on all channels:

- 1 Press ASSIGN in the Select/Assign section.
- 2 Press a SEND switch (A–E) or INPUT/OUTPUT switch.
- 3 Rotate a channel V-POT to cycle through a list of source (or destination) choices.
- 4 Press OPTION/ALL+ASSIGN or V-SEL to confirm the assignments for all channels.

You can cancel at any time by pressing the F8/Escape switch.

#### To assign the destinations of sends or I/Os on a selection of channels:

- 1 Press ASSIGN in the Select/Assign section.
- 2 Press a SEND switch (A–E) or INPUT/OUTPUT switch.
- 3 Rotate a channel V-POT to cycle through a list of source (or destination) choices.
- 4 Press OPTION/ALL+SHIFT/ADD+ASSIGN or V-SEL to confirm the assignments for all selected channels.


You can cancel at any time by pressing the F8/Escape switch.

**⚠** *If a new send or I/O choice has been made and a channel's V-SEL switch is flashing, you cannot swap banks or scroll channels. Once the new assignment has been confirmed or cancelled, you can then do this.*

## About I/O and SampleCell Labels

Instead of using the default I/O Label names for your audio inputs, outputs, busses, or SampleCell II cards, you can change them in Pro Tools to 4 character names that work better on the HUI. The I/O labels that you create in Pro Tools are mirrored in the HUI display.

You can also save these names as your default labels by clicking the Save As Default button in the Pro Tools I/O Labels dialog.

 *Refer to the Pro Tools Reference Guide for details on creating custom I/O Labels in Pro Tools.*

## Pre-Fader or Post-Fader Switching for Sends

The V-POT V-SEL switch acts as a pre/post switch for the currently active send. As pre/post status is toggled, the channel's scribble strip indicate "PRE" or "POST" (as long as the V-SEL switch is held down). Newly-created sends default to post-fader (V-SEL switch LED is turned off).

This functionality is available while in Flip mode. Pre/post switching is not available when HUI is in Assign mode, or if the master MUTE switch is operating on the V-SEL switches, or while Pro Tools is playing or recording.

- ◆ To toggle a send pre-fader or post-fader, press the V-SEL switch on its channel.
- ◆ To toggle a send pre-fader or post-fader for all channels, press OPTION/ALL+V-SEL.
- ◆ To toggle a send pre-fader or post-fader for all selected channels, press OP-TION/ALL+SHIFT/ADD+V-SEL.

---

## Selecting and Editing Inserts and Plug-Ins

There are three methods for selecting plug-in or Hardware I/O inserts for editing: using the INSERT switch with the DSP Edit/Assign display, using the INSERT switch with the SEND A–E switches, and by double-clicking the INSERT switch.

### Selecting an Insert Using the DSP Edit/Assign section

In this method, the INSERT switch is used to begin the process, but the plug-in is selected in the DSP Edit/Assign section.

**To select an insert using the DSP Edit/Assign display section menu:**

- 1** Press a channel strip INSERT switch.
- 2** The names of the first four inserts for that channel appear in the DSP Edit/Assign display area. To access Insert #5, turn the SCROLL pot to go to the next page of inserts. The name of the last insert accessed during the current session flashes in the display. If no insert was accessed in the session, Insert #1 flashes.
- 3** To select a particular insert for editing, press the SELECT switch under an insert listed in the display.
- 4** If the insert is the currently flashing item in the display, double-click the channel's INSERT switch, or press the DSP Edit/Assign section's INSERT/PARAM switch to confirm the choice. To select an insert other than the currently flashing item, press the SELECT switch under the insert listed in the display.

**5** If you have selected an insert assigned to a plug-in, its first page of parameters is displayed for editing. The INSERT/PARAM switch LED lights, indicating the display is in Parameter mode. Pressing the INSERT/PARAM switch toggles back to the Insert Display mode.

**6** To edit additional pages of parameters in Parameter mode, turn the SCROLL encoder pot to go to the next page.

The selected plug-in remains displayed until another insert is selected.

To reassign the insert to a different plug-in or Hardware I/O, refer to “Assigning Plug-Ins and Hardware I/O Inserts” on page 44.

## Selecting a Send Using the SEND A–E Switches

Use the INSERT switch in conjunction with the SENDS A–E switches in the Select/Assign section to quickly access a send.

### To select a send:

- 1** Press a channel strip INSERT switch.
- 2** Press one of the SEND A–E switches in the Select/Assign section. The SENDS A–E switches correspond to Pro Tools Sends 1–5.
- 3** Send level and pre/post fader routing are now accessible for the send. Relative send levels are shown by the LED rings around each channel’s V-POT.

To reassign the send to a different output or bus, refer to “Send and I/O Assignment” on page 38.

## Selecting an Insert by Double-Clicking the INSERT Switch

Double-clicking an INSERT switch directly accesses the first assigned insert for editing. If the insert is assigned to a plug-in, the first control parameter page of the plug-in is displayed.

Plug-ins that are engaged are shown in lower-case letters; plug-ins that are bypassed are shown in uppercase letters.

### To select an insert:

- Double-click a channel strip INSERT switch. The channel’s first assigned insert is accessed for editing.

– or –

- Double-click a channel strip INSERT switch multiple times to cycle through any inserts on the channel.

To assign a different plug-in or Hardware I/O to the insert, refer to “Assigning Plug-Ins and Hardware I/O Inserts” on page 44.

## INSERT Switch Edit Focus and Bank Swapping

As channels are bank swapped using the Bank and Channel switches, the edit focus for the INSERT stays with its original channel, even though it may not be part of the currently displayed bank of channel strips.


---

## Send Level Editing

There are five SEND switches (labeled A–E), a SHIFT (“flip”) switch, and a PAN switch that let you edit channel pan, send level or send pan from the V-POT. The SEND A–E labels can apply to either the five sends or the five inserts, depending on function. The HUI Sends view mirrors the on-screen sends view. If the current send is a stereo send, the scribble text for the send flashes.


### To edit send levels:

- 1 Press one of the five SEND switches. The switch’s LED lights, and the SELECT/ASSIGN LED display shows the name of the activated switch.
- 2 Adjust the V-POT on an individual channel to edit levels for the selected send (a send must already be assigned to the channel).
- 3 To show the destination of a particular send on all channels, press any master SEND switch (A–E) in the Select/Assign section. The destinations appear in each channel’s scribble strip.

 *For an additional method of editing send level, send pan and send mute, see “Fader Flip mode” on page 41.*

## Send Muting

When the master mute switch is lit, the V-SEL switches act as mute switches for the currently active send. In this mode, if a send is muted, its channel V-SEL switch LED lights. If the send is not muted, or if there is no active send (no destination), the LED remains unlit.

 **Keyboard shortcuts for ALL and ALL SELECTED channels using the shortcut modifier keys do not function on send mutes.**

---

## Fader Flip mode

Normally, the HUI channel faders control track volume while the rotary data encoders are used for pan, send level and send pan settings. In Flip mode, these functions are remapped.

### To enter Flip mode:

- Press SHIFT. The scribble strip displays “FLIP” and the SHIFT switch flashes.

For the currently selected SEND (A–E), send levels are mapped to the faders, send pan controls to the rotary encoders and send mutes to the channel MUTE switches. The names of the current sends are displayed in the scribble strips.

### Send Pan in Flip mode

With stereo sends, the PAN switch lights when controlling left pan and flashes when controlling right send pan. To change which send pan is being controlled, press the PAN switch.

### Send Pre/Post in Flip mode

While in Flip mode, the V-SEL switch controls send pre/post operation (regardless of the current state of the master MUTE/PREPOST switch).

---

## DEFAULT Switch

### QuickMode



This switch returns a channel strip’s faders and V-POTS to their default settings. The default settings for fader position is “0” (or unity) gain; for pan, the default is centered.

The DEFAULT switch obeys grouped behavior. To temporarily disable grouped behavior, press CTRL/CLUTCH while pressing DEFAULT, or suspend groups.

**To return a channel strip fader to its default setting:**

- Press DEFAULT+ the channel strip's SELECT switch.

**To return all channel strip faders to their default settings:**

- Press OPTION/ALL+DEFAULT+ any channel strip's SELECT switch.

**To return all selected channel strip faders to their default settings:**

- Press OPTION/ALL+SHIFT/ADD+DEFAULT+ any selected channel strip's SELECT switch.

**To return a channel strip's send level or pan to its default setting:**

- 1 Press a SEND (A–E) or PAN switch in the Select/Assign section.
- 2 Press DEFAULT+ any channel strip's V-SEL switch.

**To return all channel strip send levels or pans to their default settings:**

- Press OPTION/ALL+DEFAULT+ any channel strip's V-SEL switch

**To return all selected channel strip send levels or pans to their default settings:**

- Press OPTION/ALL+SHIFT/ADD+DEFAULT+ any selected channel strip's V-SEL switch.


**To return a Plug-In to its default setting:**

- Press DEFAULT+ the COMPARE switch in the DSP EDIT/ASSIGN area.

The plug-in returns to either the Factory Setting or the User Setting default, depending upon which is selected in the “Settings Preference” in the Plug-In Librarian pop-up menu.


---

## Working with Plug-Ins: Using the DSP Edit/Assign section

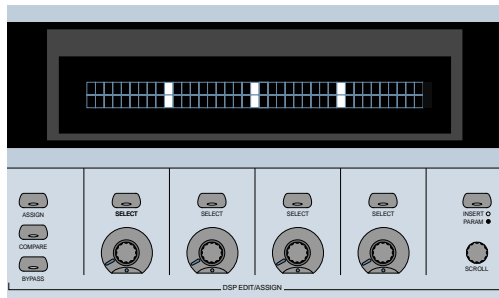

This section is used to assign plug-ins and Hardware I/O inserts, and to edit plug-in parameters.

### DSP Edit/Assign display

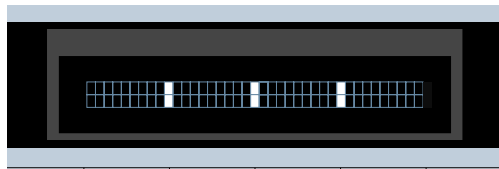

The DSP Edit/Assign display is a two-line by 40-character vacuum fluorescent display. This display shows information about individual channel inserts, plug-in parameters (for plug-in editing), and messages about Pro Tools or HUI status.

When a channel is selected via its INSERT switch in the fader section of HUI, the display shows one of the following:



- ◆ The names of the current inserts (Insert Display mode)
- ◆ Plug-in parameter pages for editing a plug-in on that channel (Parameter display mode).


The display also shows special modal dialog messages. See “Troubleshooting and Diagnostics” on page 51 for details.

## Display Brightness

The HUI display brightness is adjustable in four levels. To toggle the display between these four brightness levels, hold OPT/ALL and then press INSERT/PARAM.

When HUI goes offline, it reverts to the lowest level to preserve its display.

## DSP SELECT switches and V-POT encoders

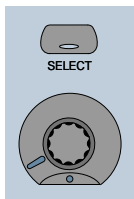

Under the HUI display, there are four sets of SELECT switches and V-POT encoders. The SELECT switch and V-POT encoder have different functions depending on whether the display is currently in Insert display mode or Parameter display mode:

- ◆ In Insert mode, the SELECT switch is used to select an insert for editing or assignment. The V-POT encoder is used in Assign mode to choose from a list of plug-ins or Hardware I/O pairs for assignment.

- ◆ In Parameter mode, these controls are used for plug-in editing. The four switches and four encoders represent the controls in a plug-in interface. Controls are mapped to *pages* (or logical groups) of controls. Generally, the switches control switched parameters (for example, EQ band in/out controls). The encoders control continuously variable parameters (such as gain), or parameters that contain several discrete choices (such as choosing different reverb algorithms in a reverb plug-in).

## Rotary Knob Settings

Many of the rotary encoders on the HUI can operate in *fixed* or *velocity-sensitive* modes. In *fixed* mode, a single complete turn of the knob goes through the entire range of values, independent of how quickly you turn it. When moving rotary encoders in fixed mode, you can hold ⌘ALT/FINE for finer control of setting values. In *velocity-sensitive* mode, the speed at which you sweep through encoded values depends on how quickly you turn the knob.

The rotary encoders on the HUI channel strips (which are used for adjusting send levels and pan controls) operate in fixed mode only.

The rotary encoders in the DSP Edit/Assign section can behave in a fixed or velocity-sensitive manner (the default setting is *velocity sensitive*). To toggle the rotary encoder mode, press the F5 switch.

## Automation Mode Indicator


If a plug-in parameter is enabled for automation (Touch, Latch, or Write), the 6 o'clock position LED (located in the bottom center of the V-POT LED collar) flashes. If automation data for the plug-in control is being recorded, the 6 o'clock LED lights.

## Touch Time-Out for V-POT Editing

Since V-POTs are not touch-sensitive, when you stop moving them, Pro Tools continues to write automation for the *Touch Timeout* period. After the Touch Timeout period, writing of automation stops and the automation data returns to its previous automation value.

In addition, you can stop the writing of automation by stopping the Pro Tools transport.

You may want to use Latch mode to record plug-in parameter automation changes using a V-POT. With Latch Automation, you can begin writing automation (by moving a V-POT) at any point during an automation pass, and the V-POT will not time out in the middle of the pass because you are not moving it.

 Refer to the *Pro Tools Reference Guide* for details on automating plug-ins.

---

## Assigning Plug-Ins and Hardware I/O Inserts

### ASSIGN Switch



You can assign plug-ins or Hardware I/O inserts from HUI.

*NOTE: Assignments cannot be made when Pro Tools is playing back or recording. If you are in Assign mode and start playback or recording in Pro Tools, the ASSIGN process is cancelled.*

### To assign a Plug-In or Hardware I/O on a single channel:

- 1 Press the INSERT switch on the channel. The INSERT switch LED lights, the associated track name is outlined in red in the Mix window.
- 2 Press the ASSIGN switch in the DSP Edit/Assign section (*not* in the Select/Assign section). The ASSIGN switch LED flashes.

If you are in Assign mode and you press the INSERT switch on another channel strip, the Assign process is cancelled.

- 3 Under the insert that you want to assign, rotate the V-POT encoder to choose a plug-in or Hardware I/O pairs.

When you rotate the V-POT encoder, its accompanying SELECT switch flashes, indicating the insert is being assigned or edited. (The switch will not flash if the assignment is unchanged.)

- 4 When a menu choice is reached, you can confirm the assignment in one of two ways:
  - Press the ASSIGN switch to confirm all of your assignments at once.
  - Press the SELECT switch beneath the insert in the display to confirm your choice. This confirms the assignment for that insert, and leaves you in Assign mode.

You can cancel at any time by pressing the F8/Escape switch.

- 5 Press the SELECT switch directly under a newly assigned plug-in, and its first control parameter page appears in the display for editing. You can switch between viewing insert selections and parameter pages by pressing the INSERT/PARAM switch.

### To assign a Plug-In or Hardware I/O on all channels:

- 1 Follow steps 1–3 above.
- 2 Press OPTION/ALL+ASSIGN in the DSP Edit/Assign area (or the SELECT switch beneath the insert that you are editing).

### To assign a Plug-In or Hardware I/O on all selected channels:

- 1 Select channels by holding down SHIFT/ADD and pressing SELECT on the channels.
- 2 Press ASSIGN in the DSP Edit/Assign section.
- 3 Follow steps 1–3 above.
- 4 Press OPTION/ALL+SHIFT/ADD+ASSIGN in the DSP Edit/Assign section.

---

## Editing Plug-In Parameters

When a plug-in insert is selected for editing, its first page of control parameters is shown in the HUI display. Individual parameters can then be edited using the switches and V-POTs in the DSP Edit/Assign section.

When the HUI is used to edit plug-in settings, the associated track name is outlined in red in the Pro Tools Mix window.

### To edit an assigned Plug-In on a channel:

- 1 Select a plug-in insert using one of the three methods described in “Selecting and Editing Inserts and Plug-Ins” on page 39. The INSERT/PARAM switch LED is lit, indicating the display is in Parameter mode.

– or –

If you just finished assigning a plug-in on an insert, press the INSERT/PARAM switch LED to enable Parameter mode (LED is lit), if necessary.

- 2 Rotate the SCROLL encoder pot to find the plug-in parameter you want to edit.

- 3 Do one of the following:

- ♦ If the parameter is a switched parameter press the SELECT switch under the parameter in the display to toggle its state.
- ♦ If the parameter is continuously variable, or has stepped values, rotate the V-POT encoder under the parameter in the display to adjust its setting. The LED ring around the V-POT indicates parameter settings or levels. Numeric parameter values are shown in the display. If a parameter amount exceeds four digits, the end of the parameter value string is truncated.

The rotary encoders in the DSP Edit/Assign section can behave in a velocity-sensitive or fixed manner. To toggle the rotary encoder mode, press the F5 switch.

## DSP Parameter Value Display

When in parameters view, holding the OPTION key while changing a DSP parameter value via the encoder causes the value to be temporarily displayed as a full 9 character value in the DSP scribble display.

## COMPARE Switch



Compare edited plug-in parameter settings to the original settings with the COMPARE switch, which mirrors the Compare button in a Pro Tools plug-in.

**⚠** *The COMPARE switch will function only in plug-ins that are visible on-screen. Use the ALT switch to open the currently active plug-in.*

## BYPASS Switch



The BYPASS switch in the DSP Edit/Assign section serves two functions:

- ◆ In Insert Display mode, as a bypass switch for any plug-in insert
- ◆ In Parameter Mode, as a Master Bypass for the currently selected plug-in

The BYPASS switch in the DSP Edit/Assign section functions differently from the Master BYPASS switch in the Select/Assign section. See “Master BYPASS Switch” on page 34.

### Bypass of Individual Inserts in Insert Display Mode


If Insert Display mode is enabled, you can bypass a plug-in by holding down the BYPASS switch (in the DSP Edit/Assign section), and pressing the SELECT switch directly under the plug-in insert in the display. When switching bypass status for individual plug-ins in this manner, the BYPASS switch LED will not light.

**!** *You cannot bypass Hardware I/O inserts from Pro Tools. To monitor playback without a hardware insert, either set the Insert Type Selector to “No Insert” or use a bypass switch on the hardware device itself.*

## Bypass of Selected Plug-Ins in Parameter Mode

If a plug-in is selected for editing and Parameter mode is enabled, pressing the BYPASS switch (in the DSP Edit/Assign section) engages the Master Bypass control for the selected plug-in. In this case, the BYPASS switch LED will light. When switching plug-ins, the BYPASS switch LED will indicate the bypass state of the currently selected plug-in.


## SCROLL Encoder Pot and INSERT/PARAM Switch



Pressing the INSERT/PARAM switch toggles the display between Insert Display mode (LED is off)—which displays the plug-in selection on an insert—and Parameter mode (LED is lit), which displays the plug-in parameter pages for editing.


The SCROLL pot is used with the INSERT/PARAM switch. In INSERT display mode, turning the SCROLL pot toggles the display between Inserts #1–4 and Insert #5 only. In PARAM display mode, rotating the SCROLL pot cycles through the control parameter pages for the currently active plug-in. When scrolling through plug-in parameter pages, the HUI will display which page is currently being viewed, and how many pages there are for the plug-in.

## Automation

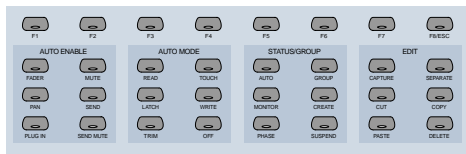

The Switch Matrix contains switches for global Automation Enabling, Automation Mode, group creation, querying status, and editing. The top row of F-keys (Function keys) are assigned to specific functions.

### Automation Enable Switches

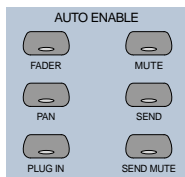


These switches globally enable automation for FADER, MUTE, PAN, SEND, SEND MUTE and PLUG-IN. These correspond to the same Automation Enable functions in Pro Tools.

MIDI track volume, pan and mute can be automated just like audio tracks. MIDI volume and pan automation is recorded as control surface data. When automating mutes on a MIDI track, it is stored as Pro Tools automation data only.

### Keyboard Shortcuts

- ◆ Press **OPTION/ALL+** any of the Automation Enable switches to toggle all parameters to the state of that switch.
- ◆ Press **⌘ALT/FINE+** any enabled switch to change the state of the switch that is pressed and set the other five to the opposite state.

## Automation Mode Switches

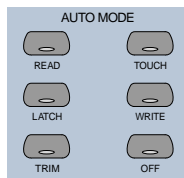

These switches are used for arming automation on individual or groups of channels. The switch modes are Read, Touch, Latch, Write, and Off.

### To enable an automation mode:

- While pressing the **AUTO** switch on the channel that you want to automate, press an Automation mode switch.

The channel's **AUTO** switch LED will light for Read mode, and flash for Write, Touch or Latch mode. The Automation mode will also be briefly displayed on the selected channels.

### To arm all channels for automation:

- Press **OPTION/ALL+** an Automation mode switch.

### To arm all selected channels for automation:

- Press **OPTION/ALL+SHIFT/ADD+** an Automation mode switch.

Changing Automation mode obeys grouped behavior. To temporarily disable grouped behavior, press **CTRL/CLUTCH** when making the Automation status change, or suspend groups.

## Trim Automation Mode

(TDM Systems Only)

### Toggling On and Off

To toggle the TRIM mode on or off for a particular track, selection of tracks or group, press the track's AUTO switch while pressing the master TRIM switch.

### Displaying Trim values

To display trim delta value instead of the absolute parameter value while adjusting Volume or Send Level TRIM automation, press ⌘ALT/FINE while moving the control.

### Current Trim Mode Display

In TRIM automation mode, the scribble strips display the mode name with the letter T before it. For example, TRIM/Touch mode is "TTch."

When a track is trim-enabled, its AUTO switch LED color displays the automation state in the following manner:

- During TRIM recording, the LED lights solid orange.
- When in TRIM Read mode, the LED flashes green and orange.
- When in any recordable Automation mode (i.e. Trim Write, Trim Latch, or Trim Touch), the LED flashes red and orange.

## Enabling Automation

### Channel and Send Pan

Enabling pan automation from HUI will turn both channel and send pan on if both are currently disabled. If one or both automation parameters are disabled, pressing AUTO/ENABLE PAN switch will enable both. If both are on, pressing AUTO/ENABLE PAN will turn them both off.

### Write to Start, End or All

In Pro Tools you can write current automation values from any insertion point forward (or backward) to the end (or beginning) of a selection or track, or to an entire selection or track during an automation pass. You can also write trim delta values in the same way.

Automation can only be written while Pro Tools is in play or half-speed play or record. You cannot write automation while Pro Tools is stopped, fast forwarding or rewinding.

- CTRL/CLUTCH+RTZ: Write to Start
- CTRL/CLUTCH+END: Write to End
- CONTROL+SHIFT+RTZ or CONTROL+SHIFT+ END: Write to All.
- To suppress the warning dialog that appears with this command, press the OPTION/ALL switch while choosing the command.

## Switched Controls and Automation with HUI

Pro Tools treats switched controls such as mutes and send mutes as touch sensitive controls. Automation data is written for as long as the switch or button for that control is pressed or touched.

For example, if you have just written a series of mute on and off states on a channel in quick succession, the manual method for clearing this automation data would require you to move to the Edit window, choose automation playlist for mute, select the mute automation data, and delete it.

In Pro Tools, you don't have to perform all of these steps. Instead, you can perform another automation pass on the track and press the Mute switch when it reaches the state you want to keep. As long as you keep pressing the Mute switch, Pro Tools overwrites the underlying mute data on the track with the current state of the switch until you press Stop.

On the Mackie HUI, this behavior also applies to plug-in-switched controls (in the DSP Edit/Assign section of HUI). Any of these four switches will work in the same manner.

---

## Automating Plug-Ins

Selection of parameters for automation must be made in Pro Tools software.

### To record automation data for a Plug-In:

- 1 Press the PLUG-IN switch in the Automation Enable section (below the DSP Edit/Assign section). The PLUG-IN switch LED will light, indicating that automation for plug-ins is armed.
  - 2 The HUI does not support arming of plug-in controls. You must arm controls on-screen in Pro Tools. Click the Automation button in the Plug-In window.
  - 3 Choose the plug-in parameters that you want to automate and click Add. Only the parameters that you choose here will be automatable. Click OK to close this dialog.
  - 4 Press the AUTO switch on the channel containing the plug-in, and select an automation mode in the Automation mode switch section. For an initial automation pass, you may wish to choose Write mode.
- Once a parameter is armed for automation, the 6 o'clock position LED on the corresponding V-POT will flash if the channel is placed into any Automation Write mode (Write, Touch or Latch).
- 5 Press Play to begin writing automation. Move the V-POTs and SELECT switches to change the plug-in parameters.
  - 6 When you have finished, press Stop.
  - 7 Press the RETURN TO ZERO switch and then press PLAY to listen to your automation pass.

To add additional automation, follow the above procedure using Touch mode. This will allow you to add new automation only when you actually move a control. It will not erase previous automation data unless you move the control at that point in the session.

---

## Function Keys



Eight Function Key switches (labeled F1–F8/ESC) are available. Currently available assignments include:

- ◆ F1 clears clipped meters and last held peaks simultaneously.
- ◆ F2 activates or deactivates the Relay (GPO) outputs on the rear panel of HUI. (See the Mackie HUI User's Guide included with your HUI for information on how to use the Relay outputs.) Relay #1 is activated by pressing the transport PLAY switch. Relay #2 is activated by pressing the transport RECORD switch.
- ◆ F3 enables or disables the audible click indication for the HUI V-POT encoders."
- ◆ F4 displays the version number of the current HUI MIDI personality file installed on the host computer.
- ◆ F5 toggles the DSP Edit/Assign V-POTs between *fixed* and *velocity sensitive* response.
- ◆ F8/ESC serves as an Escape (ESC) switch to cancel out of any assignment mode or on-screen modal dialog.

**⚠** *The HUI's F8/ESC switch cannot cancel a Bounce operation. To cancel a Bounce operation, press Escape on your computer's alpha keyboard.*

---

## Known Issues with HUI and Pro Tools

### HUI Remains Active During Waveform Computation

Even though HUI may appear to be locked out while Pro Tools computes waveform overviews, it will still function and continue to control Pro Tools.

### HUI and SampleCell

When using the modem port for the HUI connection, HUI may drop offline if:

- A SampleCell Instrument is set to anything *except* channel 1,  
– and –
- "Pass MIDI to Instrument's selected control port" is selected in the SampleCell Editor Preferences.

### MIDI Timepiece

Because of the density of MDI data transmitted between Pro Tools and HUI, intermittent communication problems may be encountered with a MIDI Timepiece. This MIDI interface is not recommended for use with Pro Tools and a HUI.

### MIDI Timepiece II

When power cycling a HUI that is connected to a MIDI Timepiece II, the MIDI Timepiece II may get into a confused state (all MIDI outputs become lit). To return to normal operation, power cycle the MIDI Timepiece II.



---

## Troubleshooting and Diagnostics

HUI provides a built-in, comprehensive diagnostic test upon startup. You can confirm that your HUI is fully functional by running this test.

### Startup Test

As HUI initializes during startup, it goes through a series of diagnostics. Once these internal tests are complete, HUI displays a message and its current firmware version.

In addition, HUI has a series of built-in tests designed to let you confirm that it is working properly. HUI, Pro Tools, your MIDI interface and setup, OMS, and your computer all work together to create a unified system. These diagnostics allow you to confirm that HUI is operating properly.

#### To place HUI in diagnostic mode:

- 1 Immediately after turning on the power switch, press the OPTION/ALL and SHIFT/ADD switches.
- 2 In diagnostic mode, all LEDs on the HUI control panel should be lit. Take notice of any LEDs that fail to illuminate.
- 3 Rotate the MASTER VOLUME pot in the Analog Monitoring section to control the speed of the channel fader travel. Make sure that the channel faders are responding to servo control.
- 4 Press Footswitch #2 to exit the test routine. If you do not have a footswitch connected, simply power down HUI, wait a few moments, and then power on HUI.
- 5 Once the initial startup routine is successfully completed, HUI will display “Welcome to HUI” in its display.

With the comprehensive diagnostics included in your HUI, you can determine definitively whether or not HUI (on its own) is working properly.

- ◆ Contact Mackie Designs if your problem lies with your HUI hardware.
- ◆ Contact Digidesign if you have problems with Pro Tools software or MIDI services (such as MIDI interface or OMS connections).

When calling Mackie or Digidesign Customer Support, be sure to indicate that you are using a HUI with Pro Tools. Provide the technician with a report of your problems and results of the diagnostic tests.

### MIDI Monitor Mode

MIDI Monitor Mode displays the last several MIDI messages transmitted or received by HUI. The data appears in hexadecimal code on its display. To gain access to MIDI Monitor Mode, press the F4 switch while pressing the OPTION/ALL switch. To leave MIDI monitor mode, press the OPTION/ALL switch and press the F4 switch again.



## chapter 3

# JL Cooper CS-10 MIDI Control Surface

The JL Cooper CS-10 and CS-10<sup>2</sup> units are eight-fader control surfaces. The CS-10<sup>2</sup> can also accommodate up to seven CS-10<sup>x</sup> expander modules (each containing eight faders) for a total of 64 faders. Pro Tools supports a maximum of 32 faders using an expanded CS-10<sup>2</sup> and CS-10<sup>x</sup> configuration. The maximum configuration would be a single CS-10<sup>2</sup> and three CS-10<sup>x</sup> units.



*While Pro Tools supports a maximum of 32 faders with these units, you can use the Left and Right Arrows on the CS-10<sup>2</sup> or CS-10<sup>x</sup> to easily bank swap the faders to control an entirely different set of tracks.*

---

## Fader Switch Functions

The switches that appear directly above the fader strips control one of the following modes:

**Solo** Changes the solo state of tracks.

**Mute** Changes mute state of tracks.

**Memory Location** Recalls or sets Memory Locations.

**Track Selection** Selects tracks on-screen for editing and other procedures.

**Track Record Arming** Changes record status of tracks.

**Target Channel Strip** Assigns a Target Track for setting pan and send routing.

When the fader switches control mutes, any track that is currently muted as a result of another track being soloed will have its associated switch LED flash.

### To cycle through the different switch modes:

- Press the Master Status button (located directly above the vertical nulling LEDs).
  - or –
- While pressing the OPTION switch (F5), press the Master Status button to cycle through the switch modes in reverse.

## Fader Switch Status LEDs

Since the CS-10 was designed, some newer modes for the switches above the faders have been added to the MIDI Control Surface Personality file for the CS-10. These modes use status LEDs to indicate the current function for the row of switches. The status LEDs are next to the Master Status button.

- ◆ Track Record-Enable mode is indicated when both Solo and Select LEDs (the top and bottom status LEDs respectively) are lit.
- ◆ When Target Channel Strip mode is enabled, all four LEDs will be lit. In this mode, you can use the Target Channel Strip switch to choose which channel strip in a bank is affected when the pan and five sends knobs are moved. The target channel strip is indicated by a red outline around the channel strip name.

## Vertical Null LEDs

The position of the CS-10's faders may not correspond with Pro Tool's on-screen fader positions. When you move a fader, it will not actually affect the volume control until the fader has passed through the on-screen position, or *null point*. The vertical null LEDs on the CS-10 indicate which direction the last touched fader must be moved in order to pass through the null. Alternatively, you can also watch the on-screen AutoMatch indicators.

## Additional Switch Functions

Switch	Function
F1	Sets selection start point
F2	Sets selection end point
F3	Capture region or regions
F4	Separate region or regions
F5	Option key
F6	Control key
F7	Command key
F8	Cycles through selection of Edit tools
F9	Toggles Online or Offline status
Left Arrow	Bank swaps channel strips to the left
Right Arrow	Bank swaps channel strips to the right
OPTION+ Left Arrow	Scrolls bank to the left by a single channel strip
OPTION+ Right Arrow	Scrolls bank to the right by a single channel strip
SHIFT+ Left Arrow	Zooms out horizontal view (time axis)
SHIFT+ Right Arrow	Zooms in horizontal view (time axis)

Switch	Function
SHIFT+ Up Arrow	Zooms in vertical view (amplitude axis)
SHIFT+ Down Arrow	Zooms out vertical view (amplitude axis)
OPTION+ Memory Loca- tion switches:	Sets Memory Location points when the current active mode for the fader switches is “Memory Locations”
SHIFT+ Memory Loca- tion Switches	Extends the current selection when the current mode for the fader switches is “Memory Loca- tions” (Same as SHIFT-click.)



*To use Memory Locations, set Pro Tools Preferences so that Memory Locations are auto-named. This way when you create a Memory Location during playback or recording, you will not have to stop to name the location.*

## Rotary Knob Functions

When controlling a TDM configuration, the six rotary knobs on the CS-10 main unit control:

- ◆ Pan and five sends
  - or –
- ◆ Six plug-in parameters in the active Plug-In Window.

When in the top mapping page, the rotary knobs edit pan and five sends. The top page is indicated by the letters “PA” appearing in the two-character LED.

While you can edit the various send levels using the CS-10’s rotary controls, you have no access to send mutes. You must control send muting using the mouse.

By holding down the OPTION switch (F5) and pressing the Up or Down Arrows, you can navigate through plug-in control parameter pages, and use the rotary knobs to edit the various plug-in parameters.

### To cycle through the Plug-In control pages:

- ◆ Up Arrow: Go to previous page
- ◆ Down Arrow: Go to next page
- ◆ OPTION (F5)+Up Arrow: Go to first page (LED will display “PS” for pan plus five sends)
- ◆ OPTION (F5)+Down Arrow: Go to last page (LED will display “Fx,” where x = last page)

After changing pages, the two-character LED will show the current page symbols until a fader is moved. The LED will then revert to showing the fader’s current level in dB values.

## Editing Sends and Plug-Ins with the CS-10

On the JL Cooper CS-10 control surface, the send and pan controls are in a center section and not on a per-track basis. As a result, the CS-10 uses the notion of the “focused” track. The focused track is the one that the send and pan controls will affect. This focused track is always within the currently selected bank.

When using the CS-10, the focused track is outlined in green in Pro Tools, while the target track for plug-in editing is outlined in red. In the event a track is both the focus of send or pan editing *and* the target of plug-in editing, the focus takes precedence and the outline will be green.

---

## Transport Switches

The CS-10 has five, standard transport control switches:

- ◆ Rewind
- ◆ Fast Forward
- ◆ Play
- ◆ Stop
- ◆ Record

Holding down the CONTROL switch (F6) and pressing the Record switch cycles through the various recording modes (Loop Record, Destructive Record, and QuickPunch).

In addition, the following special modes are supported with modifier keys:

- ◆ SHIFT+Play: Half-speed playback
- ◆ SHIFT+Rewind: Return-to-Zero
- ◆ SHIFT+FF: Go-to-End
- ◆ SHIFT+Stop: Aborts recording pass
- ◆ CONTROL (F6)+F9: Cycles thru master transport mode (Pro Tools, Serial Machine Control, or ADAT)

### Fast Forward and Rewind Settings

If the Audio During Fast Forward/Rewind option is not selected, you can continuously rewind or fast forward by holding down the corresponding switch. You can also rewind or fast forward incrementally by repeatedly clicking the corresponding switch. The size of these increments depends on which Display mode is currently selected:

- ◆ Bars/Beats: To start of previous or next bar
- ◆ Min/Sec: Moves in one-second steps

- ◆ Timecode: Moves in one-second steps
- ◆ Feet/Frames: Moves in one-foot steps
- ◆ Samples: Moves in one-second steps

### Transport Control of External Devices

The CS-10 can be used to control devices other than Pro Tools, such as the Alesis ADAT® (via the ADAT Bridge and MMC) or serial (9-pin) machine control transports (using the Machine-Control™ option for Pro Tools). If you have either of these installed, the following functions are available:

- ◆ To cycle through available transport master types (Pro Tools, Serial Machine, ADAT), press the Online switch (F9) while pressing the CONTROL switch (F6).
- ◆ The RECORD switch LED mirrors the state of the device under control.

---

## Scrolling the Edit and Mix windows

### To scroll the Edit or Mix window:

- Hold down the COMMAND switch, and press an arrow key on any hardware control surface to scroll the frontmost window one page in the indicated direction.

### To scroll to the session start or end:

- COMMAND+OPTION+Left Arrow scrolls to session start; COMMAND+OPTION+Right Arrow scrolls to session end.

---

## Scrub and Shuttle Wheel

With the CS-10 Scrub/Shuttle wheel, Pro Tools scrubs the current edit cursor position on the selected track or track pair.

If you are using a multiple track edit group, Pro Tools will scrub or shuttle the topmost track pair in the selected edit group (leftmost in the Mix window). To scrub or shuttle other tracks in an edit group, first disable the group (or use the Suspend Groups command), and position the edit cursor over the track or track pair before entering Scrub/Shuttle modes.

While in Scrub/Shuttle mode, all other screen activity is locked out, and the Edit Window status display area indicates “Scrub” or “Shuttle.”

### Shortcuts

- ◆ Scrub switch located to the left of the Scrub/Shuttle wheel: toggles Scrub mode on or off
- ◆ Shuttle switch located to the right of the Scrub/Shuttle wheel: toggles Shuttle mode on or off
- ◆ Press the Transport’s Stop button to exit Scrub or Shuttle mode
- ◆ Hold down the COMMAND switch (F7) to scrub at a fixed fine resolution, regardless of the current zoom settings.
- ◆ Hold down the SHIFT switch to make a new selection while scrubbing or shuttling; Release the SHIFT switch to finish the selection
- ◆ Hold down the OPTION switch to begin scrubbing or shuttling from the end of a selection

---

## Creating Selections Using the Scrub/Shuttle Wheel

You can create and modify on-screen selections using the Scrub/Shuttle wheel:

### To create selections using the Scrub/Shuttle wheel:

- Press the Scrub or Shuttle switch on the CS-10. The start position will be the current selection’s start point, or current cursor position if there is no selection.
- To Scrub or Shuttle from the selection end point, press the Scrub or Shuttle switch while pressing the OPTION switch.
- You can navigate to the start or end of your selection at any time by pressing the Left or Right Arrow keys.

### Insertion Follows Scrub/Shuttle Preference

How you work with CS-10’s Scrub/Shuttle wheel depends on whether you select the “Edit Insertion Follows Scrub/Shuttle” Operation preference in Pro Tools.

### If “Insertion Follows Scrub/Shuttle” is selected:

- Press the Scrub switch or the Shuttle switch and move the wheel to clear the current selection and move the cursor.
- Hold down the SHIFT switch before pressing the Scrub switch or the Shuttle switch, or before moving the wheel, to keep the current selection. As you move the wheel, the selection is expanded or trimmed.

### **If “Insertion Follows Scrub/Shuttle” is not selected:**

- Press the Scrub switch or the Shuttle switch and turn the wheel to keep your current selection and move the cursor outside of the selection.
- Hold down the SHIFT switch and turn the wheel to clear the current selection and create a new one. The new selection starts wherever you first press the SHIFT switch.
- Release SHIFT switch to move the cursor outside the new selection.
- Press the SHIFT switch additional times to trim the new selection as needed.

### **Scrub/Shuttle Tips**

- ◆ At any time during scrubbing or shuttling you can press the Left or Right Arrow to move the current scrub position to the selection start or end.
- ◆ You can freely move between scrub and shuttle modes. The current scrub or shuttle position is retained.
- ◆ If you enter scrub or shuttle but don't move the wheel or mouse, you can exit Scrub or Shuttle without affecting the current selection.

### **To define a selection using a combination of scrub or shuttle functions:**

- 1 Press the Shuttle switch to enter Shuttle mode.
- 2 Shuttle along the timeline. When you get to roughly the selection in-point, press the SHIFT switch.
- 3 Continue shuttling down the timeline. When you get to roughly the out-point, release the SHIFT switch. Your “rough selection” is now defined.
- 4 Press the Scrub switch to enter scrub mode.

5 Press the Left Arrow key to move the scrub position to the selection start.

6 Hold down the SHIFT switch (to retain your selection), scrub the selection in-point until you reach the desired location.

7 Press the Right Arrow key to move the scrub out-point to the selection end.

8 Hold down the SHIFT switch (to retain your selection), and scrub the selection out-point until you reach the desired location.



*To make selections in quick succession, define a selection using any of the techniques described above, press the Down Arrow to capture it as a Memory Location, and continue down the timeline to capture more selections.*



## chapter 4

# JL Cooper MCS-Panner

The JL Cooper MCS 3000 MIDI Panner provides a joystick for surround panning, along with other output and panner controls.

### Requirements

- Pro Tools MIX or MIXplus
- MCS-Panner Controller Personality File. This file is included with Pro Tools, and must be installed in the Controllers folder within your DAE Folder.
- MIDI Ports. The MCS-Panner requires MIDI In and Out connections from your MIDI interface in order to communicate with Pro Tools. Make sure your MIDI interface has a pair of In and Out ports available for the MCS-Panner. Connect the MCS-Panner according to the installation instructions provided with it.

**⚠** *Pro Tools can only support a single joystick panner at a time. In other words, you cannot attach more than one MCS-Panner, or combine the MCS-Panner with any other supported joystick control surface.*

## Installation and Configuration

The following are basic instructions for configuring and connecting the MCS-Panner. Refer to the MCS-Panner manual for additional instructions and information.

### Dip Switches

On the rear of the MCS-Panner are four dip switches that must be set. These dip switches define the particular MIDI messages which are sent from the unit and expected by the Pro Tools personality.

#### DIP Switch Settings on the MCS-Panner

Switches	Position
DIP Switches 1 & 2	OFF
DIP Switches 3 & 4	ON

#### To install the JL Cooper MCS-Panner:


- 1 Connect the serial-to-MIDI cable provided by JL Cooper to the Midshipman.
  - ♦ Connect the serial end to the serial port on the back of the MCS-Panner.
  - ♦ Connect the double-ended MIDI cable to the appropriate In and Out ports on your MIDI Interface.
- 2 Make sure the MCS-Panner File is installed in the Controllers folder within your DAE Folder (System Folder > DAE Folder > Controllers). If it is not, install it using your Pro Tools Installer CD-ROM.

## Configuring OMS and Pro Tools for the MCS Panner

See the configuration instructions in Chapter 1 for complete instructions on configuring OMS and Pro Tools for the MCS-Panner.

### MCS-Panner

The JL Cooper MCS-Panner provides nine switches, five rotary controls, and a joystick (with top-mounted trigger).

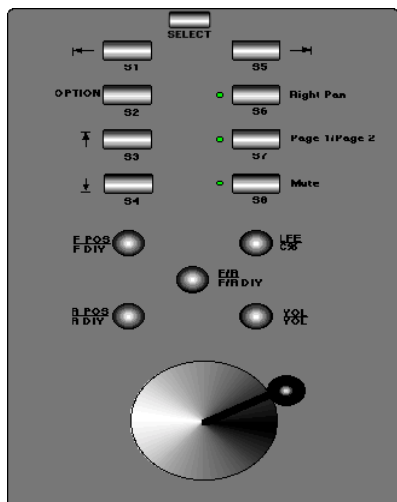

JL Cooper MCS-Panner

## Controls and Functions

The following tables list the function of each control on the MCS-Panner.

### MCS-Panner Switch Functions

Switches	Pro Tools Function
Select	Shift
S1	Move Selection Left
S2	OPTION, used for track and panner window navigation shortcuts
S3	Step Up through Main, Sends and Inserts on Selected track
S4	Step Down through Inserts, Sends and Main on Selected track
S5	Move Selection Right
S6	Right Pan (LED lit when on Right Pan)
S7	Page 1, Page 2 (LED lit for Page 2). Selects the operating mode for the MCS Panner multi-function rotary knobs.
S8	MUTE (LED lit when muted)

## Rotary Controls

### MCS-Panner Rotary Knob Functions

Knobs		
E1	F POS   F DIV	Controls Front Position (L<C>R) in mode page 1, or Front Divergence in mode page 2
E2	LFE   Center% (Percentage)	Controls LFE (Low Frequency Effects) in page 1, or Center Percentage in page 2
E3	F/R   F/R Div	Controls Front to Rear Position (F/R) in page 1, or Front to Rear Divergence in page 2
E4	R POS   R Div	Controls Rear Position (L/R) in page 1, or Rear Divergence in page 2
E5	Vol	Controls Panner Volume

## Joystick

The joystick on the MCS-Panner is non-motorized, non-touch sensitive. There is no visual feedback for positional movement when the panner is not engaged. The button on the top provides takeover.

## Using the MCS-Panner

This section explains how to navigate (select tracks and panners) and pan using the MCS Panner.

## Selecting Tracks and Panners

**To target an MCS-Panner to a plug-in or panner,**

**To select the previous or next track:**

- Press S1 (previous) or S5 (next). The currently selected track's Track Name is outlined in *red*. in the Mix and Edit windows.

**To select a track's main, send or insert panners:**

- Press S3 and S4 switches to scroll through the track's currently available Main or Send panners. The currently selected Output or Send will be outlined in *blue* as you cycle through the available choices on that track.

If more than one control surface is focused on an output or send, its outline will be highlighted in white.

## Selection and Navigation Shortcuts

**To go to the first or last track in a session:**

- Press Option+S1 to go to the first track.
- Press Option+S5 to go to the last track.

**To go directly to the selected track's main output:**

- Press Option+S3.

**To go directly to the selected track's Send 5:**

- Press Option+S4.

## Stereo Tracks and Panners

When panning stereo tracks, left and right sides can be panned independently (or, unlinked).

### To unlink stereo panners:

- Press Control while editing a parameter using the MCS-Panner.

## Panning with the Joystick

The MCS-Panner features a joystick for 360° surround panning. There is a trigger button at the top of the joystick. Once the desired Panner or Output Window is selected, panning can be input using the joystick (explained below) or the rotary knobs (explained in “Panning with the Rotary Knobs” on page 62).

### To pan with the joystick:

- 1 Select the track you want to pan (see “Selecting Tracks and Panners” on page 61).
- 2 Press the Takeover button at the top of the joystick and begin panning.

## Constraining Joystick Panning

Joystick panning can be constrained (or, guided) to straight-line trajectories. Though the joystick will not constrain its movement, being non-motorized, the resulting panning moves will be constrained to the initial pan movement and direction.

### To constrain panning to initial direction:

- Press the Select switch (or the Shift key) + pan using the joystick.

### To constrain joystick panning to vertical (front/rear):

- Enable 3-Knob mode in the current Panner window (click its icon). When 3-Knob mode is engaged, horizontal (left and right) movements are ignored. Front/rear position along the current 3-Knob trajectory follows the joystick front/rear position.



See “Panning with the Rotary Knobs” on page 62.

## Joystick Position and Takeover

The takeover button engages absolute position when pressed. Therefore it is possible to have jumps in position when takeovers are done.

To minimize this, try to have the joystick as near as possible to the pan cursor’s position, then trigger takeover. For example, place the joystick at the 12:00 position when automating pan moves starting from the default, 12:00 position of a track’s pan cursor. Some offline automation smoothing may need to be done to eliminate undesirable snaps in position.



For details on Pro Tools automation, and surround panning, consult the Pro Tools Reference Guide.

## Panning with the Rotary Knobs

The MCS-Panner rotary knobs provide direct control of Front, Rear, and Front/Rear Divergence, Center percentage, LFE level and channel Volume.

The MCS-Panner follows Pro Tools panning mode selection (3-Knob or standard).

## Page 1 and Page 2 Modes

The rotary knobs on the MCS-Panner are multi-function controls that can be used for knob-based panning, or for divergence and parameter editing. Page 1 and 2 are selected with the S7 switch, as explained in the following instructions.

### Fine-Adjust Mode

The MCS-Panner supports fine-adjust mode for all rotary controls, using the standard Pro Tools command.

#### To pan in fine-adjust mode:

- Command-rotate any knob.

#### To pan using the knobs:

- 1 Select the track and output you want to pan (see “Selecting Tracks and Panners” on page 61).
- 2 Make sure that the MCS-Panner is in Page 1 mode (the S7 “Page switch” LED is lit in Page 2 mode, off in Page 1).
- 3 Adjust the Front, Rear, or Front/Rear Position knobs as appropriate.

#### 3-Knob Panning Controls

Pan Parameter	Rotary Knob
Front Position	Use E1
Rear Position	Use E2
Front/Rear Position	Use E3

## Adjusting Other Parameters

The MCS-Panner rotary knobs can adjust channel volume, LFE contribution, Divergence parameters, and Center Percentage.

### Channel Volume

#### To adjust channel volume:

- Use E5 (in either Page 1 or Page 2 mode).

### LFE

#### To adjust the LFE slider:

- Use E2 (make sure the MCS-Panner is in Page 1 mode).

### Adjusting Divergence and Center Percentage

The MCS-Panner can adjust a panner’s divergence and center parameters.

#### To adjust divergence:

- 1 Press S7 to put the MCS-Panner in Page 2 mode (the S7 LED is lit to indicate Page 2).
- 2 Adjust the Front, Rear, or Front/Rear Divergence knobs as appropriate:

#### Divergence Controls

Parameter	Rotary Knob
Front Divergence	Use E1
Rear Divergence	Use E4
Front/Rear Divergence	Use E3

#### To adjust Center Percentage:

- 1 Press S7 until the MCS-Panner is in Page 2 mode (the S7 LED will be lit).
- 2 Rotate E2 as desired.

## Using Multiple Control Surfaces

Multiple control surfaces, and their current track or control focus, are indicated in Pro Tools using color outlines of the track or controls associated with each device.

Track selection (focus) of the MCS-Panner is indicated with a red outline of the Track Name.

Output and Send selection (focus) is indicated with a blue outline around the output or send display in the Mix and Edit windows.

When more than one control surfaces is focused on the same Output or Send, its display will be outlined in white.

---

## MCS-Panner with a Digidesign EditPack

The MCS-Panner will be automatically disabled when an EditPack™ is present as a control surface in Pro Tools. You will not be able to enable an MCS-Panner or any other non-Digidesign panning control surfaces in the MIDI Controllers window while an EditPack is enabled as an Ethernet control surface.

## chapter 5

# Penny & Giles MM-16 and DC-16 MIDI Control Surfaces


The Penny & Giles MM-16 and DC-16 control surfaces work with Pro Tools as 16-channel strip control surfaces. There are separate personalities for the MM-16 and DC-16.

These control surfaces have unique continuous fader belt controls, and ladder-styled LED displays embedded within each belt to indicate levels at all times. Working with the MM-16 or DC-16 is very similar to working on a touch-sensitive motorized-fader control surface. Also, you can reliably punch in automation data at any point in time, since you are always at your automation null point.

**!** *When connecting a Penny & Giles MM-16 or DC-16, be sure to use the MIDI ports on the rear panel labeled “Control In” and “Aux Out.”*

### DC-16


The DC-16 is a new version of the original MM-16 MIDI control surface. An overlay is provided to place a label insert over the various controls. Penny & Giles has prepared a label insert for the DC-16 specifically for Pro Tools. Contact a Penny & Giles dealer or distributor to get a Pro Tools-specific insert.

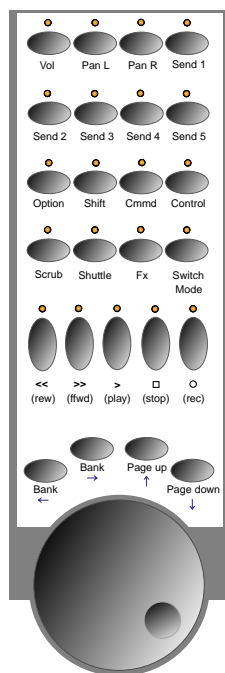

DC-16 switch assignments for Pro Tools

## MM-16

If you have an MM-16, you may require an updated firmware version from Penny & Giles to ensure that the various LEDs on the front panel light correctly when used with Pro Tools. A few of these LEDs have different MIDI system-exclusive codes from the DC-16, and some LEDs may not turn on or off unless you have installed the updated firmware.

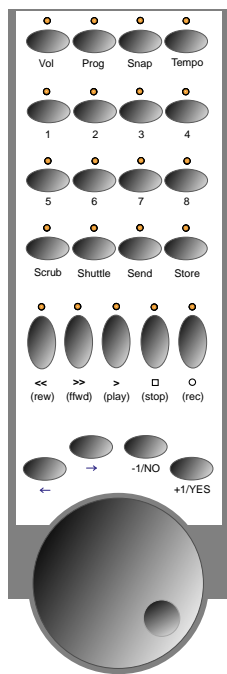

*MM-16 switch assignments for Pro Tools*

### Fader Belt Functions

The fader belts can control one of the following modes:

- ◆ Volume
- ◆ Pan Left
- ◆ Pan Right

- ◆ Send 1
- ◆ Send 2
- ◆ Send 3
- ◆ Send 4
- ◆ Send 5
- ◆ Plug-In Controls

There are dedicated switches to assign the fader belts to each of the modes:

- ◆ Vol: makes continuous fader belts control volume
- ◆ Pan L (labeled Prog on MM-16): makes continuous fader belts control pan left
- ◆ Pan R (labeled Snap on MM-16): makes continuous fader belts control pan right
- ◆ Send 1 (labeled Tempo on MM-16): makes continuous fader belts control Send #1 level
- ◆ Send 2 (labeled 1 on MM-16): makes continuous fader belts control Send #2
- ◆ Send 3 (labeled 2 on MM-16): makes continuous fader belts control Send #3
- ◆ Send 4 (labeled 3 on MM-16): makes continuous fader belts control Send #4
- ◆ Send 5 (labeled 4 on MM-16): makes continuous fader belts control Send #5
- ◆ FX switch (labeled Send on MM-16): makes continuous fader belts edit plug-in parameters

When a belt is moved, its assigned control is identified on the bottom row of the two-line LCD.

When the belts are controlling send levels, the switches automatically control corresponding send mutes regardless of the current switch mode.



---

## Fader Belt Switch Functions

The 16 switches that correspond to the belts can control any one of the following modes:

- ◆ Solo: Switches change solo state of tracks
- ◆ Mute: Switches change mute state of tracks
- ◆ Memory Location: Recalls or Sets Memory Locations
- ◆ Track Selection: Chooses which tracks are selected on-screen
- ◆ Track Record-Arming: changes record status of tracks
- ◆ Name: Identifies the control currently assigned to the corresponding belt in the LCD

When the fader belt switches control mutes, any track that is currently muted as a result of other tracks being soloed will have its associated switch LED flash.

When the belts are controlling plug-in parameters, fader belt switches automatically function in Name mode.

### To cycle through the switch modes:

- 1 Press the Switch Mode switch (labeled Send on the MM-16).
- 2 While pressing the OPT switch (5 on the MM-16), press the Switch Mode switch (Send on the MM-16) to cycle through the switch modes in reverse order.

When a switch is pressed, its assigned control is identified on the top row of the two-line LCD.

---

## Additional Switch Functions

- ◆ SHIFT+Memory Location switches: Extends the current selection when the current active mode for the fader belt switches is “Memory Locations.” (Equivalent to Shift-clicking in Pro Tools.)
- ◆ OPT+Memory Location switches: Sets Memory Location points when the current active mode for the fader switches is “Memory Locations.”




*If you select the “Auto-Name Memory Locations When Playing” option in the Editing page of Pro Tools Preferences, you will not have to stop to name the location when you create a Memory Location during playback or recording.*

### To swap banks or scroll channel strips:

- ◆ Bank Left (Left Arrow on MM-16): Bank swaps channel strips to the left
- ◆ Bank Right (Right Arrow on MM-16): Bank swaps channel strips to the right
- ◆ OPT+Bank Left: Bank scrolls to the left by a single channel strip
- ◆ OPT+Bank Right: Bank scrolls to the right by a single channel strip
- ◆ SHIFT+Bank Left (Left Arrow on MM-16): Zooms in horizontal view (time axis)
- ◆ SHIFT+Bank Right (Right Arrow on MM-16): Zooms out horizontal view (time axis)

### To move through plug-in control pages:

- ◆ Page Up (labeled -1/NO on MM-16): Go to previous plug-in control page
- ◆ Page Down (labeled +1/YES on MM-16): Go to next plug-in control page
- ◆ OPT+Page Up (labeled -1/NO on MM-16): Go to first plug-in control page
- ◆ OPT+Page Down (labeled +1/YES on MM-16): Go to last plug-in control page


 *“FX” must be the current mode to edit plug-ins.*

### To enable online status:

- ◆ STOP on the MM-16 (located in the three-switch group “START/CONT/STOP”): Toggles Online or Offline status
- ◆ The Online switch on the DC-16 is the farthest right auxiliary button. The auxiliary buttons on the DC-16 are the row of eight switches on the top left of the unit.

### To use modifier keys:

- ◆ OPT (labeled 5 on MM-16) = Option (Macintosh) or Alt (Windows) key; for editing of all switches of the same type simultaneously
- ◆ SHIFT (labeled 6 on MM-16) = Shift key
- ◆ Command (labeled 7 on MM-16) = Command (Macintosh) or Start (Windows) key; for fine resolution when in Scrub mode
- ◆ Control (labeled 8 on MM-16) = Control (Macintosh) or Ctrl (Windows); provides temporary “clutch” for groups

 *Not all of these modifier keys allow you to perform the same operations as their counterparts on the computer keyboard. For example, the Command (Macintosh) or Start (Windows) keys do not allow fine control of Pro Tools on-screen levels from the MM-16 or DC-16.*

---

## Transport Switches

The MM-16 and DC-16 have five standard transport control switches:

- ◆ Rewind
- ◆ Fast Forward
- ◆ Play
- ◆ Record
- ◆ Stop

While pressing the Control switch (labeled 8 on MM-16), press the Record switch to cycle through the record modes (Loop Record, Destructive Record, and QuickPunch).

In addition, the following special transport modes can be enabled with modifier keys:

- ◆ SHIFT+Play: Half-speed Playback
- ◆ SHIFT+Rewind: Return-to-Zero
- ◆ SHIFT+FF: Go-to-End
- ◆ SHIFT+Stop: Aborts (cancels) recording pass
- ◆ Control (labeled 8 on MM-16)+Online (labeled STOP on the MM-16 in the three-switch group “START/CONT/STOP”): Cycles thru master transport mode (Pro Tools, Serial Machine Control, or ADAT)

## Transport Control of External Devices

The MM-16 and DC-16 can be used to control devices other than Pro Tools, such as the Alesis ADAT® or serial (9-pin) machine control transports (using the MachineControl™ option for Pro Tools).

- ◆ While pressing the Control switch (labeled 8 on MM-16), press the Online switch (labeled STOP on the MM-16) to cycle through available transport master types (Pro Tools, Serial Machine, ADAT).
- ◆ The Record switch LED reflects the state of the device under control.

---

## Scrub and Shuttle Functions

Scrub and Shuttle modes are supported on the MM-16 and DC-16, using the Scrub/Shuttle wheel. Pro Tools will always scrub the topmost track or track pair with the current edit cursor position or selection.

Pro Tools will scrub or shuttle the topmost track pair in an edit group (left-most in the Mix window) consisting of more than one track. To scrub or shuttle other tracks in an edit group, first disable the group (or use the Suspend Groups command), and position the edit cursor over the track or track pair you wish to scrub before entering Scrub or Shuttle modes on your control surface.

While in Scrub or Shuttle mode with the MM-16 or DC-16, all other screen activity is locked out, and the Edit Window status display area (lower-left corner of the window) will display “Scrub” or “Shuttle.”

## Keyboard Shortcuts

- ◆ Scrub (labeled Edit on MM-16): Enables Scrub mode
- ◆ Shuttle (labeled Util on MM-16): Enables Shuttle mode
- ◆ Press the Transport’s Stop button to exit Scrub or Shuttle mode
- ◆ Press the Command key (labeled 7 on the MM-16) to scrub at a fine resolution regardless of the current zoom settings
- ◆ Press the SHIFT switch to make a new selection while scrubbing or shuttling; Release the SHIFT switch to finish the selection
- ◆ Press the OPT switch to begin scrubbing or shuttling from the end of a selection

---

## Creating Selections Using the Scrub/Shuttle Wheel

You can create and modify on-screen selections using the Scrub/Shuttle wheel.

### To create selections using the Scrub/Shuttle wheel:

- Press the Scrub switch (labeled Edit on MM-16) or Shuttle switch (labeled Unit on MM-16) on the MM-16 or DC-16. The start position is the current selection’s start point, or current location of the cursor if there is no selection.
- While pressing the OPT switch, press the Scrub switch (labeled Edit on MM-16) or Shuttle switch (labeled Unit on MM-16) to scrub or shuttle from the selection end point.
- You can navigate to the start or end of your selection at any time by pressing the Left or Right Arrow keys.

## Insertion Follows Scrub/Shuttle Preference

How you work with the Scrub/Shuttle wheel depends on whether you select the “Insertion Follows Scrub/Shuttle” Operation preference in Pro Tools.

### If “Insertion Follows Scrub/Shuttle” is selected:

- Press the Scrub switch or the Shuttle switch and move the wheel to clear the current selection and move the cursor.
- Press the SHIFT switch before pressing the Scrub switch (labeled Edit on MM-16) or the Shuttle switch (labeled Unit on MM-16), or before moving the wheel, to keep the current selection. As you move the wheel, the selection is expanded or trimmed.

### If “Insertion Follows Scrub/Shuttle” is not selected:

- Press the Scrub switch (labeled Edit on MM-16) or the Shuttle switch (labeled Unit on MM-16) and turn the wheel to keep your current selection and move the cursor outside of the selection.
- Press the SHIFT switch and turn the wheel to clear the current selection and create a new one. The new selection starts wherever you first press the SHIFT switch.
- Release SHIFT switch to move the cursor outside the new selection.
- Press the SHIFT switch additional times to trim the new selection as needed.

## Scrub and Shuttle Tips

- ◆ At any time during scrubbing or shuttling you can press the Left or Right Arrow to move the current Scrub position to the selection start or end, respectively.
- ◆ You can freely move between Scrub and Shuttle modes. The current Scrub or Shuttle position is retained.
- ◆ If you enter Scrub or Shuttle mode but don’t move the wheel or mouse, you can exit without affecting the current selection.

### To define a selection using a combination of Scrub and Shuttle functions:

- 1 Press the Shuttle switch (labeled Unit on MM-16) to enter Shuttle mode.
- 2 Shuttle along the timeline. When you get to roughly the selection in-point, press the SHIFT switch.
- 3 Continue shuttling down the timeline. When you get to roughly the out-point, release the SHIFT switch. Your “rough selection” is now defined.
- 4 Press the Scrub switch (labeled Edit on MM-16) to enter Scrub mode.
- 5 Press the Left Arrow key to move the Scrub position to the selection start.
- 6 Press the SHIFT switch (to retain your selection), and scrub the selection in-point until you reach the desired location.
- 7 Press the Right Arrow key to move the Scrub out-point to the selection end.

**8** Press the SHIFT switch (to retain your selection), and scrub the selection out-point until you reach the desired location.



*To make selections in quick succession, define a selection using any of the techniques described above, press the Down Arrow to capture it as a Memory Location, and continue down the timeline to capture more selections.*

---

## **Resetting the Penny & Giles MM-16 or DC-16**

If power is interrupted, or if for some other reason your MM-16 or DC-16 needs to be reset (powered off and on again), you should follow these steps:

### **To reset the MM-16 or DC-16 with Pro Tools:**

- 1** Power down the control surface.
- 2** Disable the MM-16 or DC-16 in the Peripherals dialog, and close the dialog.
- 3** Power up the control surface.
- 4** Reenable the control surface in the Peripherals dialog.



## chapter 6

# Peavey PC-1600 MIDI Control Surface

The Peavey PC-1600 is a fully programmable MIDI control surface with 16 channel faders and 16 switches.

Although the PC-1600 has a data wheel, it currently can only send control surface values corresponding to one of the 16 faders. Therefore, scrub and shuttle functions are *not* supported on this control surface.

---

### Preset Modes

For your convenience, there are seven, custom preset modes for the PC-1600 to control Pro Tools. These presets are automatically downloaded to the control surface when enabled in the Peripherals dialog, overwriting any existing presets stored there. The LCD screen displays the name of the current preset.

Each preset defines specific functionality for each of 32 controls (16 faders and 16 switches). While there are 16 faders, the control surface actually operates as a device with eight channel strips and with banks comprised of eight channels.

The preset modes for the PC-1600 are:

#### **Eight Volumes + Eight Pans**

- ◆ Faders #1–8 control volume for the eight tracks in the current bank
- ◆ Faders #9–16 control the pans for the eight tracks in the current bank

#### **Sixteen Plug-In Controls**

- ◆ Faders #1–16 control the 16 plug-in controls in the currently active plug-in parameter page

#### **Eight Volume + Eight Send #1 Levels**

- ◆ Faders #1–8 control volume for the eight tracks in the current bank
- ◆ Faders #9–16 control the Send #1 levels for the eight tracks in the current bank

#### **Eight Volume + Eight Send #2 Levels**

- ◆ Faders #1–8 control volume for the eight tracks in the current bank
- ◆ Faders #9–16 control Send #2 levels for the eight tracks in the current bank

#### **Eight Volume + Eight Send #3 Levels**

- ◆ Faders #1–8 control volume for the eight tracks in the current bank
- ◆ Faders #9–16 control Send #3 levels for the eight tracks in the current bank

### **Eight Volume + Eight Send #4 Levels**

- ◆ Faders #1–8 control volume for the eight tracks in the current bank
- ◆ Faders #9–16 control Send #4 levels for the eight tracks in the current bank

### **Eight Volume + Eight Send #5 Levels**

- ◆ Faders #1–8 control volume for the eight tracks in the current bank
- ◆ Faders #9–16 control Send #5 levels for the eight tracks in the current bank

---

## **Function Switches**

There are 16 switches positioned directly below each fader. Switches #1–8 control different functions depending on the active preset. Switches #9–16 have the same functionality for all presets.

### **Switch Mode Determines Functionality for Switches #1–8**

In all preset modes except “16 Plug-In Controls” (Preset #2), switches #1–8 control the function defined by one of the following switch modes:

**Mute** Changes Mute state of tracks.

**Solo** Changes Solo state of tracks.


**Track Record-Arming** Changes Record status of tracks.

**Selection** Selects tracks for editing and other functions.

**Memory Location** Toggles between Recall and Set Memory Locations.

### **To cycle through the switch modes:**


- Press the Change Mode switch (Switch 16) to cycle through the switch modes.
- While pressing the OPTION switch (Switch 9), press the Change Mode switch (Switch 16) to cycle through the switch modes in reverse order.

 *Since there are no switch LEDs on the PC-1600, there is no indication which switch mode is currently active.*

### **“Sixteen Plug-In Controls” Preset Functionality for Switches #1–8**

In the “Sixteen Plug-In Controls” preset (Preset #2), the faders control plug-in parameters, while the first eight switches control the following transport functions:

- ◆ Switch 1: Rewind
- ◆ Switch 2: Fast Forward
- ◆ Switch 3: Stop
- ◆ Switch 4: Play
- ◆ Switch 5: Record

 *While pressing the CONTROL switch (Switch 11), press the Record switch to cycle through the various Record modes (Loop Record, Destructive Record, and Quick-Punch).*

- ◆ Switch 6: toggles Online or Offline status
- ◆ Switch 7: (Not Used)
- ◆ Switch 8: (Not Used)
- ◆ SHIFT (Switch 10)+Switch 1: Return-To-Zero
- ◆ SHIFT (Switch 10)+Switch 2: Go-To-End
- ◆ SHIFT (Switch 10)+Switch 3: Abort Record
- ◆ SHIFT (Switch 10)+Switch 4: Half-Speed Playback



## Functionality for Switches #9–16

Switches #9–16 have the same functionality for all seven presets:

- ◆ Switch 9: Option
- ◆ Switch 10: Shift
- ◆ Switch 11: Control
- ◆ Switch 16: Cycles through the switch modes (Mute, Solo, Track Record-Arming, Selection, and Memory Location)

### When the Mix window is the current active window:

- ◆ Switch 12: Bank swaps eight channel strips to the left
- ◆ Switch 13: Bank swaps eight channel strips to the right
- ◆ SHIFT (Switch 10)+Switch 12: Bank scrolls to the left by a single channel strip
- ◆ SHIFT (Switch 10)+Switch 13: Bank scrolls to the right by a single channel strip
- ◆ Switch 14: go to prior plug-in parameter page
- ◆ Switch 15: go to next plug-in parameter page
- ◆ SHIFT (Switch 10)+Switch 14: Go to top plug-in parameter page
- ◆ SHIFT (Switch 10)+Switch 15: Go to bottom plug-in parameter page

### When the Edit window is the current active window:

- ◆ SHIFT (Switch 10)+Switch 12: Zooms out horizontal view (time axis)
- ◆ SHIFT (Switch 10)+Switch 13: Zooms in horizontal view (time axis)
- ◆ SHIFT (Switch 10)+Switch 14: Zooms in vertical view (amplitude axis)
- ◆ SHIFT (Switch 10)+Switch 15: Zooms out vertical view (amplitude axis)

---

## Transport Control of External Devices

The PC–1600 can be used to control devices other than Pro Tools, such as the Alesis ADAT or serial (9–pin) machine control transports (using the MachineControl option for Pro Tools).

- ◆ While pressing Switch 11 (CONTROL), press Switch 6 (Online) to cycle through available transport master types (Pro Tools, Serial Machine, ADAT).
- ◆ The RECORD switch LED reflects the state of the device under control.



## appendix a

# Using Other MIDI Control Surfaces

If you do not have any of the currently supported MIDI control surfaces, you can use a third-party control surface (such as the JL Cooper FaderMaster) and program its controls to function like a JL Cooper CS-10. This allows you to use any MIDI control surface that allows reprogramming of its MIDI protocol. You can then access Pro Tools with that MIDI protocol and adopt the CS-10's functional personality.

The following information assumes you have a familiarity with MIDI protocol, including MIDI System Exclusive (sysex) messages.

For details on reprogramming your control surface, refer to its documentation, or contact the manufacturer for more information.

### Fader and Switch Data

Control surface commands for the CS-10 are on MIDI channel 16. These messages are all of the form:

B Fh cc vv

where cc=switch or wheel number, and vv=value.

Table 1 on page 78 give values (vv) for each fader or switch.

## Wheel Data

Wheel data is in the form of “2’s complement” with the 6th bit as the sign bit. Positive numbers are sent for clockwise rotation. These numbers represent the wheel counts accumulated since the last transmission (such as relative position count), similar to what a computer mouse transmits. The resolution is approximately 180 counts per revolution, and transmissions are sent at about 10 milliseconds intervals when the wheel is being turned.

**Table 1. Wheel Data**

cc	Name	vv
00h	Mute switch 1	00=release, 7Fh=depressed
01h-07h	Mute switches 2-8	00=release, 7Fh=depressed
08h	Mode switch	00=release, 7Fh=depressed
09h	Shift switch	00=release, 7Fh=depressed
0Ah	F1 switch	00=release, 7Fh=depressed
0Bh	F2 switch	00=release, 7Fh=depressed
0Ch	F3 switch	00=release, 7Fh=depressed
0Dh	F4 switch	00=release, 7Fh=depressed
0Eh	F5 switch	00=release, 7Fh=depressed
0Fh	F6 switch	00=release, 7Fh=depressed
10h	F7 switch	00=release, 7Fh=depressed
11h	F8 switch	00=release, 7Fh=depressed
12h	F9 switch	00=release, 7Fh=depressed
13h	REW switch	00=release, 7Fh=depressed

**Table 1. Wheel Data**

cc	Name	vv
14h	FF switch	00=release, 7Fh=depressed
15h	Stop switch	00=release, 7Fh=depressed
16h	Play switch	00=release, 7Fh=depressed
17h	Record switch	00=release, 7Fh=depressed
18h	Left Wheel switch	00=release, 7Fh=depressed
19h	Right Wheel switch	00=release, 7Fh=depressed
1Ah	Up cursor switch	00=release, 7Fh=depressed
1Bh	Down cursor switch	00=release, 7Fh=depressed
1Ch	Left cursor switch	00=release, 7Fh=depressed
1Dh	Right cursor switch	00=release, 7Fh=depressed
1Eh	Footswitch	00=release, 7Fh=depressed
40h	Fader 1	Range 0 to 7Fh
41h-47h	Faders 2-8	Range 0 to 7Fh
48h	Boost/Cut	Range 0 to 7Fh
49h	Frequency	Range 0 to 7Fh
4Ah	Bandwidth	Range 0 to 7Fh
4Bh	Send 1	Range 0 to 7Fh
4Ch	Send 2	Range 0 to 7Fh
4Dh	Pan	Range 0 to 7Fh
60h	Whee	2s complement / 7 bits data

## LED Data

All messages from the computer to the control surface are transmitted using SysEx commands as follows:

F0h 15h 15h 00h cc vv F7h

where cc=LED number, and vv=value.

**Table 2. LED Data**

cc	Name	vv
00h	Mute LED 1	00=off, 7Fh=on
01h-07h	Mute LEDs 2-8	00=off, 7Fh=on
08h	Select Mode LED	00=off, 7Fh=on
09h	Locate Mode LED	00=off, 7Fh=on
0Ah	Mute Mode LED	00=off, 7Fh=on
0Bh	Solo Mode LED	00=off, 7Fh=on
0Ch	Down Null LED	00=off, 7Fh=on
0Dh	Up Null LED	00=off, 7Fh=on
0Eh	Left Wheel LED	00=off, 7Fh=on
0Fh	Right Wheel LED	00=off, 7Fh=on
10h	1s 7-Segment Digit	(see below)
11h	10s 7-Segment Digit	(see below)
12h	Record LED	00=off, 7Fh=on
13h	Decimal pt to right of 10s digit	00=off, 7Fh=on
14h	Decimal pt to right of 1s digit	00=off, 7Fh=on

For the 7-segment LEDs, Bit 0= segment a, Bit 1= segment b, and so on. In each case, a set bit turns the segment on.



# index

## Numerics

5.1 Surround mixing 14

## A

Active in Background 4  
and HUI 13

### ADAT

controlling from CS-10 56  
controlling from HUI 16  
controlling from MM-16 or DC-16 69

### auditioning

on HUI 18

### Auto switch

on HUI 32

### automation

of panning on HUI 48  
of plug-ins 10  
of plug-ins on HUI 49  
pass through null fader automation 7  
status of 28  
Trim mode on HUI 33  
writing to Start, End or all on HUI 48

### Automation Enable switches

on HUI 47

### Automation Mode switches

on HUI 36

### automation modes

selecting on HUI 33

## B

bank swapping 2, 6  
on HUI 27

banks 2

### Bypass switch

on HUI 34, 46

## C

channel display  
on HUI 28

channel fader strip  
on HUI 27

channel nudging 6

channel scrolling 27

Clutch button 28

control surface targets 9

Controllers folder in DAE Folder 1

### CS-10

controlling ADAT from 56  
controlling external devices 56  
Fader switch 53  
function switches 54  
null point 54  
plug-ins 55  
rewind and fast-forward settings on 56  
rotary knobs 55  
scrolling 56  
Scrub/Shuttle 57  
sends 55  
transport 56

## D

### DC-16 65

controlling ADAT 69  
controlling external devices 69  
fader belt 66  
resetting 71  
transport 68

### Default switch

on HUI 41

### diagnostics

on HUI 51

### display brightness

on HUI 43

DSP Select switches  
on HUI 43

## E

Edit mode switches  
on HUI 23

Edit Tool switches  
on HUI 23

external devices  
controlled from CS-10 56  
controlled from DC-16 or MM-16 69  
controlled from HUI 16  
controlled from PC-1600 75

## F

fader  
on HUI 27

fader automation  
pass through null 7

fader belt  
on MM-16 and DC-16 66

Fader switch  
on CS-10 53

fast-forward settings 8  
on CS-10 56

Flip mode  
on HUI 41

footswitch  
on HUI 17

function switches  
on CS-10 54  
on PC-1600 74

## G

global modifier switches 8

Group switches  
on HUI 36

groups  
membership status on HUI 28  
on HUI 28, 37  
suspending 37

## H

half-speed playback 16

hardware I/Os  
assigning on HUI 38

## HUI 11

Active in Background 13  
and SampleCell 50  
assigning inserts 39, 44  
assigning plug-ins 39, 44  
auditioning 18  
Auto switch 32  
Automation Mode switches 36, 47  
automation modes 33  
bank swapping 27  
Bypass switch 34, 46  
channel display 28  
channel scrolling 27  
communication with computer 13  
comparing plug-ins 45  
controlling ADAT 16  
controlling external devices 16  
Default switch 41  
diagnostics 51  
display brightness 43  
DSP Select switches 43  
Edit mode switches 23  
Edit Tool switches 23  
editing inserts on 39  
enabling automation 47  
fader 27  
footswitch 17  
group membership status 28  
Group switches 36  
groups 28, 37  
Insert switch 34  
inserting plug-ins 46  
level meters 15  
Loop Record on 16  
Monitor switch 37  
monitoring 14  
Mute switch 31  
numeric keypad 19  
on-screen dialog messages 13  
pan controls 36  
Phase switch 36  
plug-in editing 45  
Plug-in window 13  
QuickPunch 15  
Record Ready mode 31  
Record Safe mode 32  
rotary encoders 35, 43, 45  
Rude Solo Light 19  
saving 22  
scribble strip 28



- scrolling 14
- Scrub mode 20
- Select switch 30
- Select/Assign section 37
- Selection mode 25
- setting pre/post roll 17
- Solo Safe mode 32
- Solo switch 31
- Status switches 36
- Suspend switch 32, 34
- Talkback 14
- transport controls 15
- troubleshooting 51
- V-SEL switch 35
- Window switches 13
- working with plug-ins 39, 42
- Zoom mode 25

## I

- I/O labels 39
- inactive, display of 30
- input source 28
- Insert switch
  - on HUI 34
- inserts
  - assigning on HUI 39, 40, 44
  - editing on HUI 39
- Is Controller (OMS) 3
- Is Multitimbral (OMS) 3

## J

- jog 21
- joystick for MCS Panner 59

## L

- level display 29
- level meters
  - pre/post fader select 15
- Loop Record
  - on HUI 16

## M

- MachineControl 16, 21, 56, 69
- MCS Panner 59
  - additional controls 63
  - constraining 62
  - controls and functions 60

- dip switches 59
- fine-adjust mode 63
- joystick and takeover 62
- joystick panning 62
- Page 1 and Page 2 modes 63
- rotary controls 61
- selecting tracks and panners 61
  - with multiple control surfaces 64

- Memory Locations 19, 22, 55, 58, 71
- meters 15

- MIDI Control Surfaces 1

- configuring 2
  - general information 6
  - parameters 5
  - removing 6
  - terminology 2
  - using other 77

- MIDI Machine Control 16, 56

- MIDI Monitor Mode

- on HUI 51

- MM-16 65

- controlling ADAT with 69
  - controlling external devices 69
  - fader belt 66
  - resetting 71
  - transport 68

- Modifier switches

- on HUI 24

- Monitor status 28

- Monitor switch

- on HUI 37

- monitoring

- on HUI 14

- multiple outputs 6

- multiple plug-in and panner windows 9

- Mute switch

- on HUI 31

- muting

- Follows Mix Groups preference 32
  - Pro Tools preferences 32

## N

- navigation

- on HUI 24

- nudging by channel 6

- null point

- on CS-10 54

numeric keypad  
on HUI 19

## O

OMS parameters 3  
output destination 28  
outputs, assigning multiple 29

## P

panning  
    automating on HUI 48  
    controls on HUI 36  
    in surround with MCS Panner 62  
    position 29  
pass through null  
    fader automation 7  
PC-1600  
    channel considerations 5  
    controlling external devices 75  
    function switches 74  
    preset modes 73  
Peavey PC-1600 73  
Penny & Giles 65  
    DC-16 65  
    MM-16 65  
personalities 1  
Phase switch  
    on HUI 36  
Plug-In window  
    on HUI 13  
plug-ins  
    assigning on HUI 39, 44  
    automating 10  
    automating on HUI 49  
    bypassing on HUI 46  
    comparing on HUI 45  
    editing on HUI 45  
    inserting on HUI 46  
    on CS-10 55  
    on HUI 39, 42  
    page scrolling on HUI 46  
    pages 9  
pre/post fader metering 15  
Pre/Post Roll  
    setting on HUI 17  
pre/post send display 29

preferences  
    muting 32  
    solo 32  
presets  
    on PC-1600 73

## Q

QuickPunch  
    on HUI 15

## R

Record Ready switch  
    on HUI 31  
Record Safe mode  
    on HUI 32  
resetting MM-16 and DC-16 71  
rewind settings 8  
    on CS-10 56  
rotary encoders  
    on HUI 35, 43, 45  
    on MCS Panner 62  
Rude Solo Light  
    on HUI 19

## S

SampleCell labels 39  
saving  
    from HUI 22  
scribble strip  
    on HUI 28  
scrolling 9  
    on CS-10 56  
    on HUI 14  
Scrub mode  
    on HUI 20  
Scrub/Shuttle  
    and MachineControl 21  
    creating selections on CS-10 57  
    creating selections on HUI 21  
    creating selections on MM-16 and DC-16 69  
    on CS-10 57  
    on HUI 19  
    on MM-16 and DC-16 69  
    preferences and CS-10 57  
    preferences and HUI 21  
    preferences and MM-16/DC-16 70

- Select switch
  - on HUI 30
- Select/Assign section
  - on HUI 37
- Selection mode
  - on HUI 25
- sends
  - assigning on HUI 38, 40
  - destination 28
  - editing levels on HUI 41
  - Flip mode on HUI 41
  - muting on HUI 41
  - on CS-10 55
  - panning on HUI 41
  - pre/post display 29
  - pre/post on HUI 41
  - pre/post-fader settings on HUI 39
  - SEND A—SEND E on HUI 40
- Shuttle Lock mode
  - on HUI 20
- Shuttle mode
  - on HUI 20
- Smart Tool
  - selecting from HUI 23
- solo
  - Follows Mix Groups preference 32
  - Latch preference 32
  - Pro Tools preferences 32
- Solo Safe mode 32
  - on HUI 32
- Solo switch
  - on HUI 31
- Status switches
  - on HUI 36
- Surround monitoring
  - on HUI 14
- Suspend switch
  - on HUI 32, 34
- suspending groups
  - on HUI 37

## T

- Talkback
  - on HUI 14
- targets and control surfaces 9
- Time Counter
  - on HUI 18

- transport controls
  - on HUI 15
  - on MM-16 and DC-16 68
- Trim mode
  - displaying trim values 48
  - on HUI 33
- troubleshooting
  - on HUI 51

## U

- Undo
  - from HUI 22

## V

- velocity-sensitive DSP rotary encoders 43
- video/audio decks and MIDI Controllers 8
- V-POTS 35, 43, 45
- V-SEL switch 35

## W

- Window switches
  - on HUI 13
- Windows computers, connecting and configuring 2

## Z

- Zoom mode
  - on HUI 25
- Zoom switches
  - on HUI 24

